

**SENA**


**30K**

**MOTORCYCLE BLUETOOTH  
COMMUNICATION SYSTEM  
WITH MESH INTERCOM™**




**HD SPEAKERS**

CLICK  
ANY  
SECTION  
TO  
BEGIN

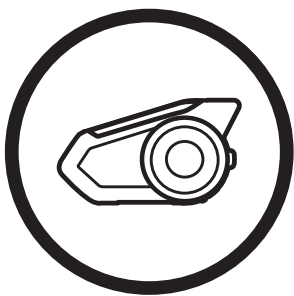


ABOUT THE  
HEADSET

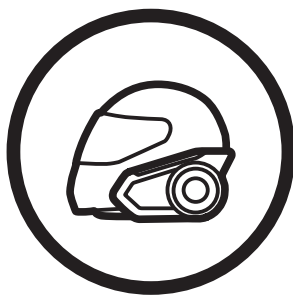

INSTALLING  
THE HEADSET



GETTING  
STARTED

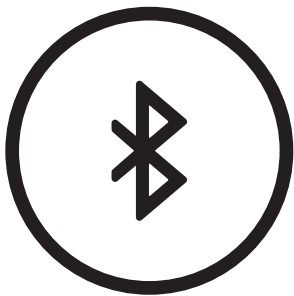


PAIRING WITH  
DEVICES




MOBILE  
PHONE USAGE



STEREO  
MUSIC

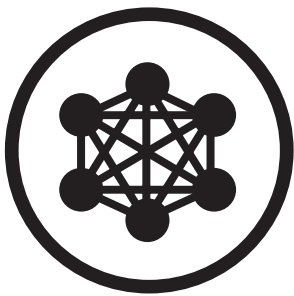

MESH  
INTERCOM

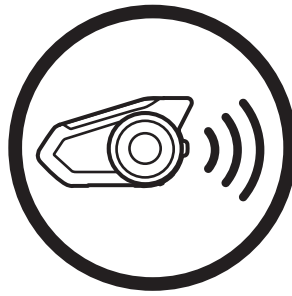

INTERCOM  
SETUP



AUDIO  
MULTITASKING




USING THE  
FM RADIO



AMBIENT MODE



VOICE  
COMMAND

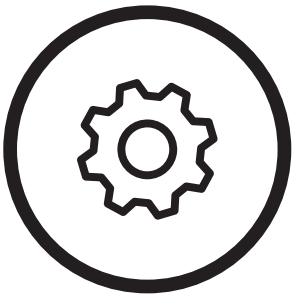

GENERAL  
SETTINGS




REMOTE  
CONTROL




TROUBLE-  
SHOOTING

LEGEND:






**Tap** button/Jog Dial the specified number of times



**Press and Hold** button/Jog Dial for the specified amount of time



**Rotate** Jog Dial clockwise (right) or counterclockwise (left).

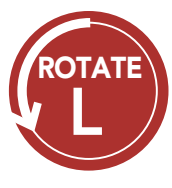


**Rotate while Pressing** Jog Dial clockwise (right) or counterclockwise (left).



**Audible prompt** from the headset

# TABLE OF CONTENTS

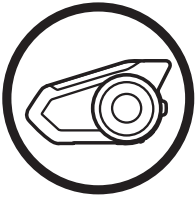

<b>1. ABOUT THE MOTORCYCLE BLUETOOTH COMMUNICATION SYSTEM WITH MESH INTERCOM™</b>	<b>9</b>
1.1 Product Details	9
1.1.1 Headset Main Unit	9
1.1.2 Universal Clamp Kit	9
1.2 Package Contents	10




<b>2. INSTALLING THE HEADSET ON YOUR HELMET</b>	<b>12</b>
2.1 Helmet Installation	12
2.2 Using the Glued Surface Mounting Adapter	15
2.3 Switching the Microphone	17
2.3.1 Wired Boom Microphone	18
2.3.2 Wired Microphone	18
2.4 Earbuds	19
2.5 External Mesh Intercom Antenna	19



<b>3. GETTING STARTED</b>	<b>20</b>
3.1 Button Functions	20
3.2 Downloadable Sena Software	21
3.2.1 Sena 30K Utility App	21
3.2.2 Sena Device Manager	21
3.3 Powering On and Off	22
3.4 Charging	23
3.5 Checking the Battery Level	24
3.6 Volume Adjustment	25
3.7 Configuration Menu	26



TABLE OF CONTENTS CONTINUED

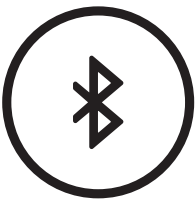

**4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES** **29**

4.1	Mobile Phone	30
4.1.1	Pairing When the 30K is Turned Off	30
4.1.2	Pairing When the 30K is Turned On	31
4.2	Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter	32
4.3	Advanced Selective Pairing: Hands-Free or A2DP Stereo	33
4.3.1	Phone Selective Pairing - Hands-Free Profile	33
4.3.2	Media Selective Pairing - A2DP Profile	34
4.4	GPS Pairing	36



**5. MOBILE PHONE USAGE** **38**


5.1	Making and Answering Calls	38
5.2	Speed Dialing	39
5.2.1	Assigning Speed Dial Presets	39
5.2.2	Using Speed Dial Presets	39
5.3	VOX Phone (Default: Enable)	41



**6. STEREO MUSIC** **42**

6.1	Playing Music with Bluetooth Devices	42
6.2	Playing Music with non-Bluetooth Devices	43
6.3	Music Sharing	44
6.4	Audio Equalizer (Default: Off)	46
6.5	Smart Volume Control (Default: Disable)	46

TABLE OF CONTENTS CONTINUED

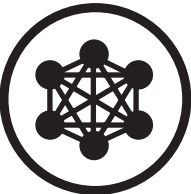

<b>7. MESH INTERCOM</b>	<b>47</b>
7.1 What is Mesh Intercom?	47
7.1.1 Open Mesh	48
7.1.2 Group Mesh	49
7.2 Starting Mesh Intercom	50
7.3 Using the Mesh in Open Mesh	50
7.3.1 Channel Setting (Default: channel 1)	51
7.4 Using Mesh in Group Mesh	53
7.4.1 Creating a Group Mesh	53
7.4.2 Joining an Existing Group Mesh	54
7.5 Reset Mesh	56
7.6 Toggling Open Mesh/Group Mesh	56
7.7 Enable/Disable Mic (Default: Enable)	57



<b>8. BLUETOOTH INTERCOM SETUP</b>	<b>58</b>
8.1 Intercom Pairing	58
8.2 Two-Way Intercom	61
8.3 Multi-Way Intercom	62
8.3.1 Starting a Three-Way Intercom Conference	62
8.3.2 Starting a Four-Way Intercom Conference	64
8.3.3 Ending Multi-Way Intercom	65
8.4 Three-Way Conference Phone Call with Intercom Users	65
8.5 Group Intercom	67
8.6 Mesh Intercom Conference with Bluetooth Intercom Participant	68
8.7 Universal Intercom	70
8.8 VOX Intercom (Default: Disable)	73
8.9 Intercom VOX Sensitivity (Default: 3)	74
8.10 HD Intercom (Default: Enable)	74
8.11 Advanced Noise Control™ (Default: Enable)	74

TABLE OF CONTENTS CONTINUED



**9. AUDIO MULTITASKING** **75**

9.1	Audio Multitasking Settings	75
9.2	Intercom-Audio Overlay Sensitivity (Default: 3)	76
9.3	Audio Overlay Volume Management (Default: Disable)	76



**10. USING THE FM RADIO** **77**

10.1	FM Radio On/Off	77
10.2	Seek and Save Radio Stations	78
10.3	Scan and Save Radio Stations	80
10.4	Temporary Station Preset	81
10.5	Navigating Preset Stations	82
10.6	Region Selection	82
10.7	Radio Data System (RDS) Alternative Frequency (AF) Setting (Default: Disable)	83
10.8	FM Station Guide (Default: Enable)	83



**11. AMBIENT MODE** **84**



**12. VOICE COMMAND** **85**

12.1	Voice Command Setting (Default: Enable)	87
------	---	----



**13. GENERAL SETTINGS** **88**

13.1	Function Priority	88
13.2	Firmware Upgrades	88
13.3	Voice Prompts (Default: Enable)	89
13.4	Sidetone (Default: Disable)	89
13.5	Delete All Bluetooth Pairing Information	90

TABLE OF CONTENTS CONTINUED



**14. REMOTE CONTROL** **91**

14.1 Pairing with the Remote Control 91



**15. TROUBLESHOOTING** **93**

15.1 Fault Reset 93

15.2 Factory Reset 94



# 1. ABOUT THE MOTORCYCLE BLUETOOTH COMMUNICATION SYSTEM WITH MESH INTERCOM™

MENU

## 1.1 Product Details


Product Details

Package Contents

### 1.1.1 Headset Main Unit



### 1.1.2 Universal Clamp Kit

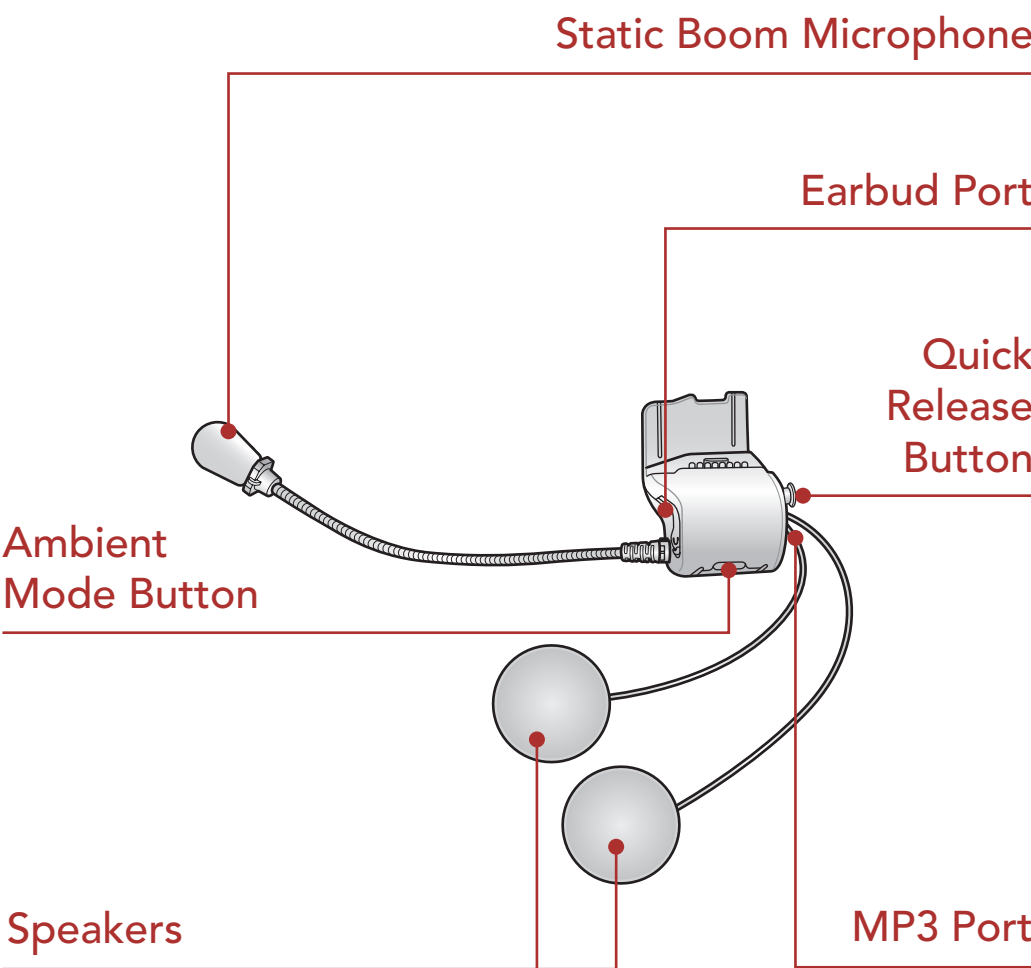











# 1. ABOUT THE MOTORCYCLE BLUETOOTH COMMUNICATION SYSTEM WITH MESH INTERCOM™



Product  
Details

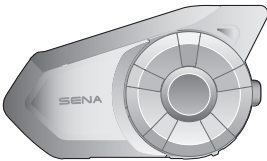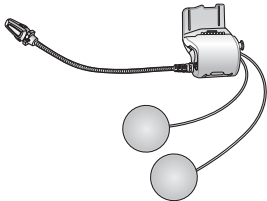Package  
Contents

## 1.2 Package Contents

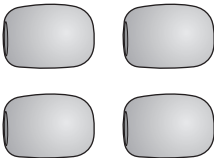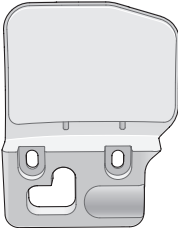• 30K Headset Main Unit	
• Universal Helmet Clamp	
• Wired Boom Microphone	
• Wired Microphone	
• Hook and Loop Fastener for Boom Microphone	
• Hook and Loop Fastener for Wired Microphone	
• Microphone Sponges	
• Glued Surface Mounting Adapter	








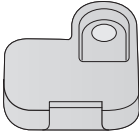
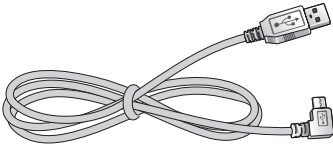


# 1. ABOUT THE MOTORCYCLE BLUETOOTH COMMUNICATION SYSTEM WITH MESH INTERCOM™



Product  
Details

Package  
Contents

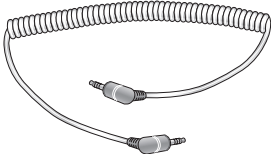• Speaker Pads	
• Hook and Loop Fasteners for Speakers	
• Boom Microphone Holder	
• Hook and Loop Fastener for Holder	
• 2.5 to 3.5 mm Audio Cable	
• Rubber Pads	
• Allen Wrench	
• Speaker Port Cover	
• USB Power & Data Cable (Micro USB Type)	






## 2. INSTALLING THE HEADSET ON YOUR HELMET


### 2.1 Helmet Installation

To securely install the headset on the helmet, please follow this procedure.

1. Insert the back plate of the clamp unit between the internal padding and the external shell of the helmet, and tighten the two screws.

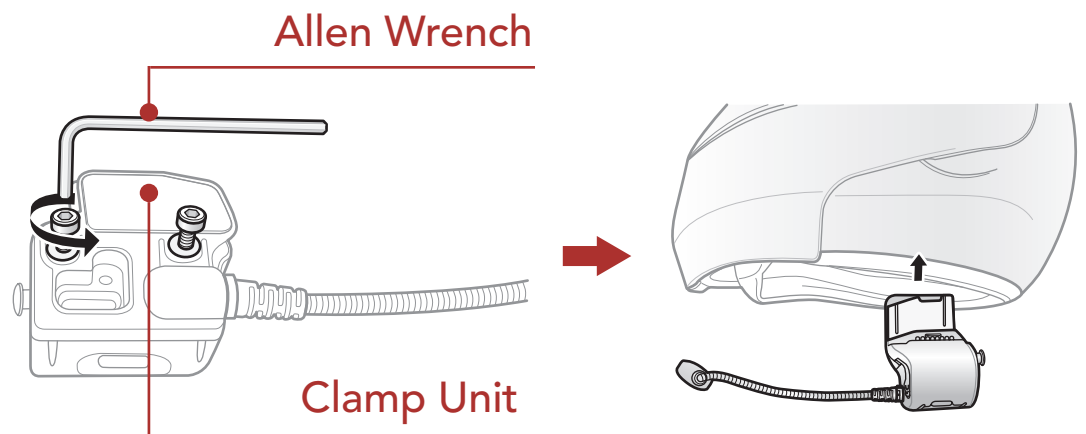

**Note:** Depending on the size and shape of your helmet, you may need to change the thickness of the rubber pad between the clamp plates using the two extra rubber pads in the box. To increase the overall thickness, attach the thinner one to the original rubber pad or replace the original rubber pad with the thicker one.

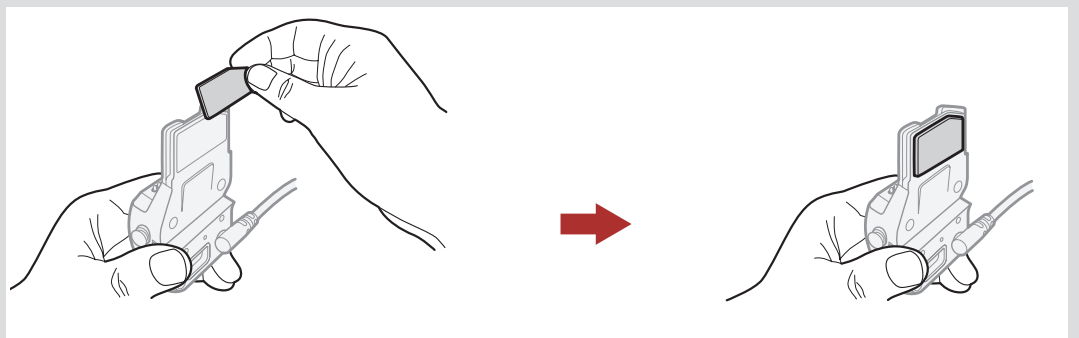

Helmet  
Installation

Using the  
Glued Surface  
Mounting  
Adapter

Switching the  
Microphone


Earbuds

External Mesh  
Intercom  
Antenna




## 2. INSTALLING THE HEADSET ON YOUR HELMET

2. Place the helmet speakers along with the hook and loop fasteners, centered to your ear, in the ear pockets of the helmet. If the helmet has deep ear pockets, you can use the speaker pads to place the speakers closer to your ears.

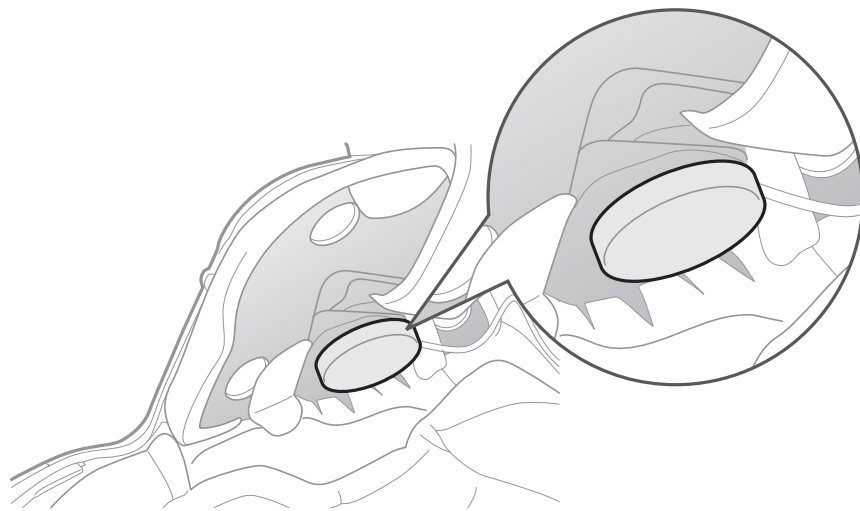

### Note:

- The speaker with the shorter wire is for the left ear and the speaker with the longer one is for the right ear.
- Make sure that the microphone is located properly close to your mouth when you wear the helmet. Adjust the direction of the microphone so that the fin side of the microphone is facing outward, away from your lips.

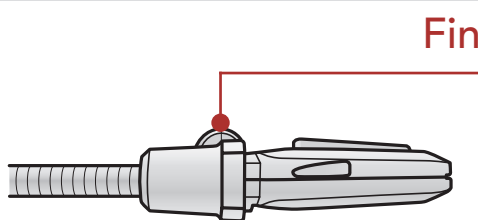



## 2. INSTALLING THE HEADSET ON YOUR HELMET

### Helmet Installation


### Using the Glued Surface Mounting Adapter

### Switching the Microphone


### Earbuds

### External Mesh Intercom Antenna

3. Attach the headset main unit to the clamp unit. Slide the main unit down onto the clamp unit until it clicks firmly into the bottom portion of the clamp unit.

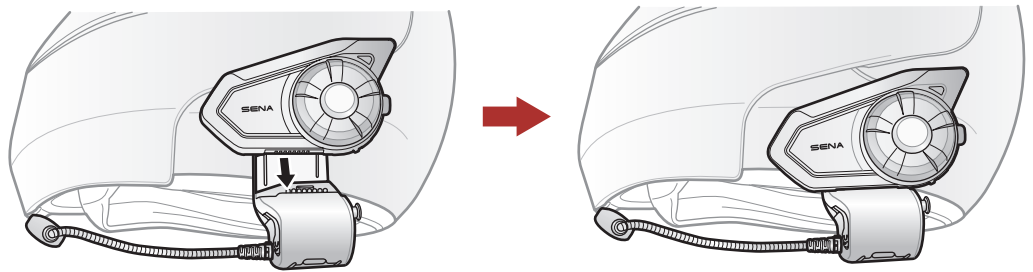

4. To remove the main unit from the clamp unit, press the Quick Release Button to slide it off the clamp unit.

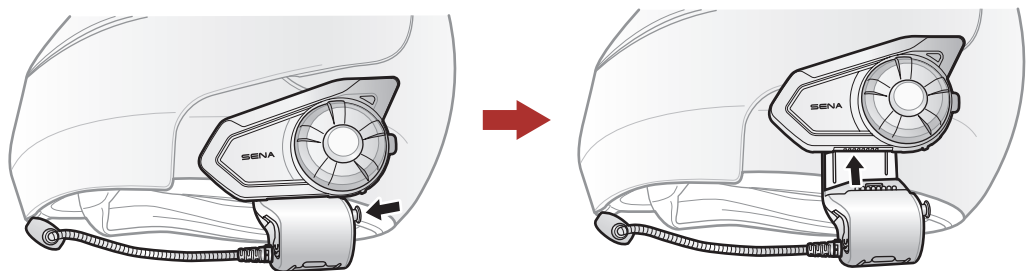




## 2. INSTALLING THE HEADSET ON YOUR HELMET


### 2.2 Using the Glued Surface Mounting Adapter

If you have any problem equipping the clamp unit on the helmet for any reason, you may use the glued surface mounting adapter to attach the clamp unit on the external surface of the helmet.


1. Remove the speaker unit.

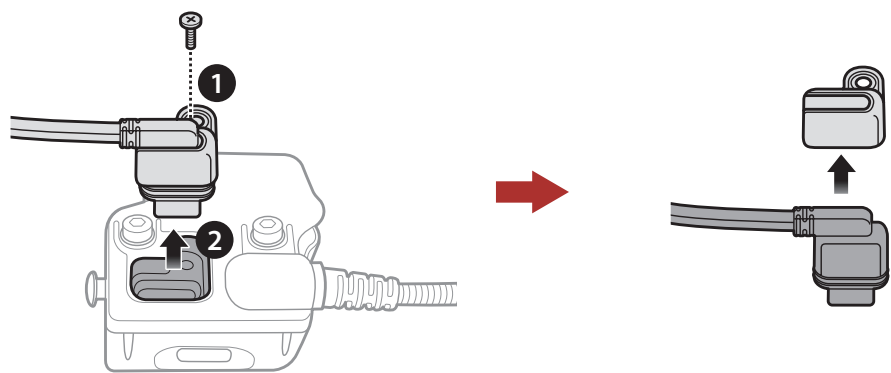

2. Remove the back plate.

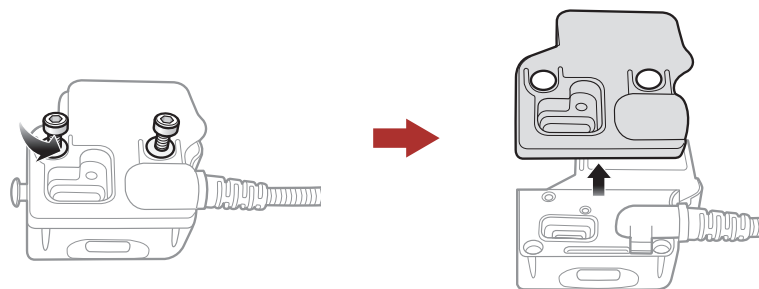

3. Remove the rubber pad and replace it with the thicker rubber pad included in the package.

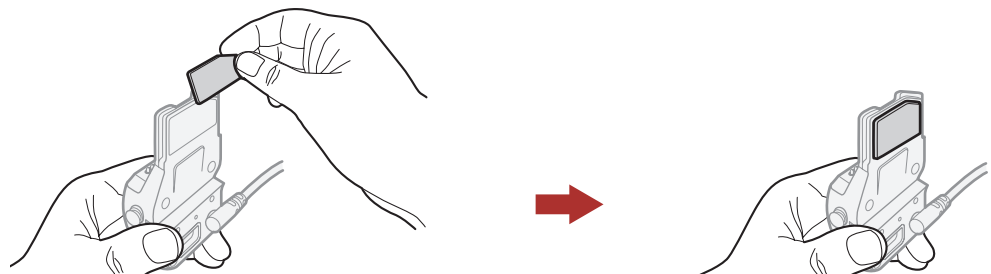

4. Hook on the adapter to the clamp unit then screw in the glued external adapter to the clamp unit.

Helmet  
Installation

Using the  
Glued Surface  
Mounting  
Adapter

Switching the  
Microphone


Earbuds

External Mesh  
Intercom  
Antenna



## 2. INSTALLING THE HEADSET ON YOUR HELMET

5. Reconnect the speaker cable to the speaker port.

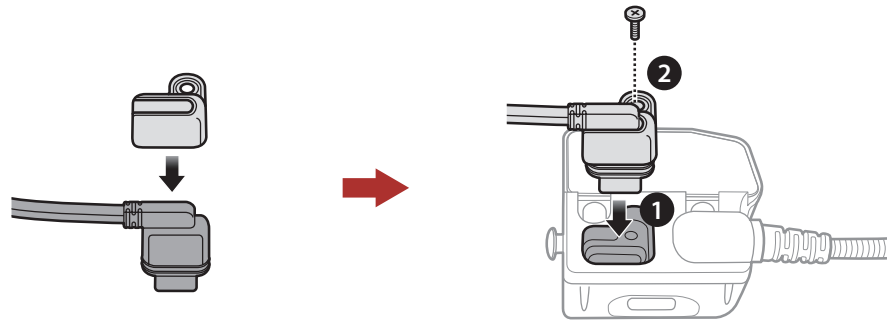

Helmet  
Installation


Using the  
Glued Surface  
Mounting  
Adapter

Switching the  
Microphone

Earbuds

External Mesh  
Intercom  
Antenna

6. Locate a proper surface on the helmet to attach the unit then clean the helmet surface location with a moistened towel and allow to dry thoroughly.
7. Peel off the cover of the adhesive tape of the adapter and attach the unit on the proper surface of your helmet.

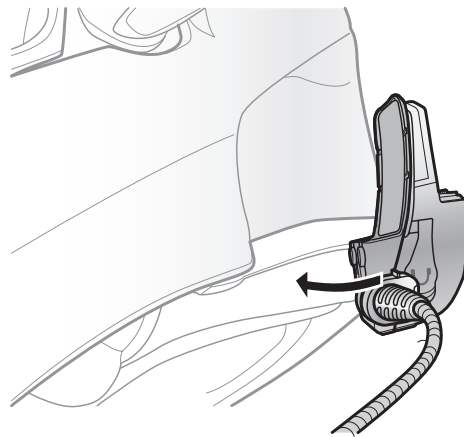

**⚠ Caution:** Sena recommends using the clamp unit. The glued surface mounting plate is provided for convenience, but is not the recommended mounting method. Sena is not responsible for its use.




## 2. INSTALLING THE HEADSET ON YOUR HELMET

### 2.3 Switching the Microphone

If you want to use a different microphone instead of the static boom microphone, please refer to the following steps.

1. Remove the back plate of the clamp unit.
2. Connect the microphone according to your helmet type.
3. Lock the microphone to the clamp.
4. Reattach the back plate to cover the microphone and the speaker port.

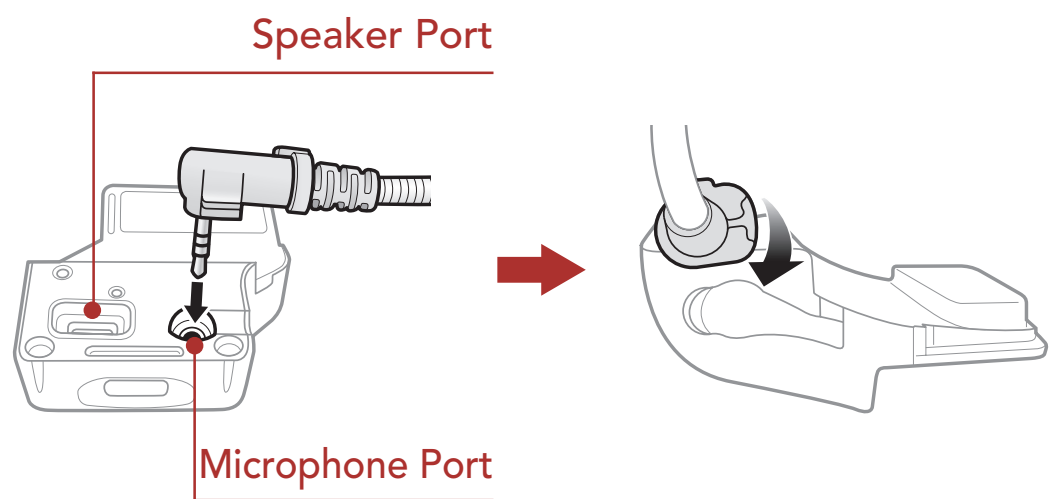

Helmet  
Installation

Using the  
Glued Surface  
Mounting  
Adapter

Switching the  
Microphone

Earbuds

External Mesh  
Intercom  
Antenna



## 2. INSTALLING THE HEADSET ON YOUR HELMET

Helmet  
Installation

Using the  
Glued Surface  
Mounting  
Adapter


Switching the  
Microphone

Earbuds

External Mesh  
Intercom  
Antenna


### 2.3.1 Wired Boom Microphone

When installing the included wired boom microphone, place the hook and loop fastener at the end of the boom microphone between the internal helmet cheek pad and the internal wall of the helmet shell. The boom microphone should be mounted so it is facing close to your mouth when you wear the helmet.

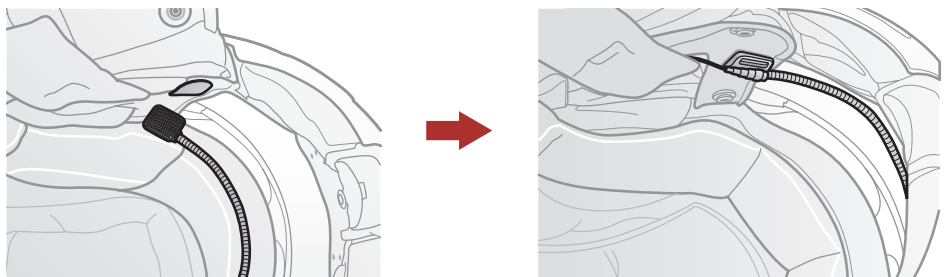

### 2.3.2 Wired Microphone

In case of the wired microphone, attach the enclosed hook and loop fastener for the wired microphone to the inside of the chin guard for full-face helmets. Place the wired microphone on the hook and loop fastener and connect it to the connector of the clamp unit.

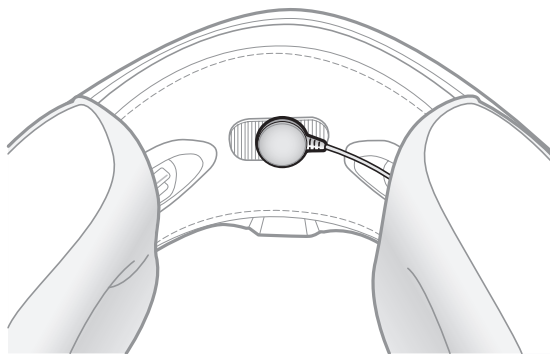






## 2. INSTALLING THE HEADSET ON YOUR HELMET

### 2.4 Earbuds

You can connect your earbuds to the clamp while having the speakers connected to the clamp. The sound of the earbuds will be active while the sound of the outer speakers becomes inactive.

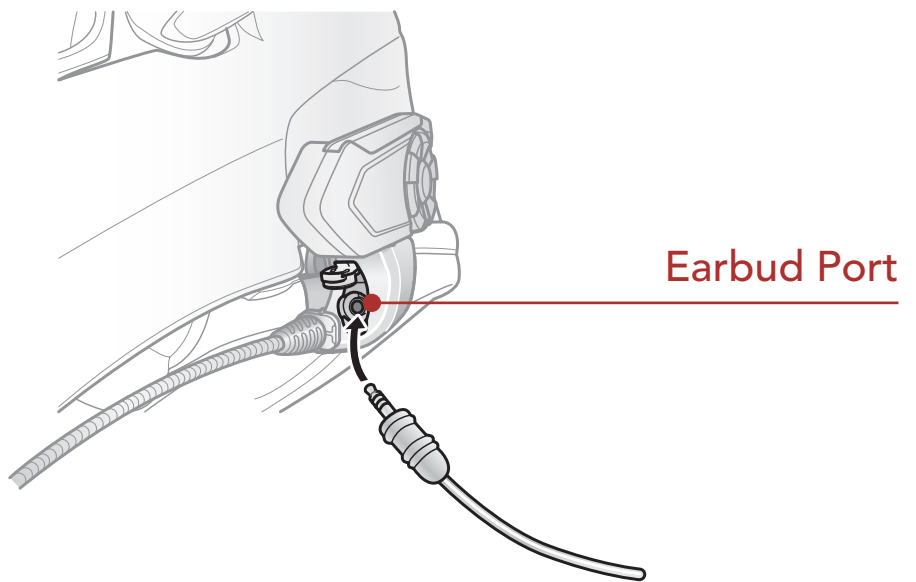

Helmet  
Installation

Using the  
Glued Surface  
Mounting  
Adapter


Switching the  
Microphone

Earbuds

External Mesh  
Intercom  
Antenna

### 2.5 External Mesh Intercom Antenna

Pull the **Mesh Intercom** Antenna outwards slightly to unfold it.

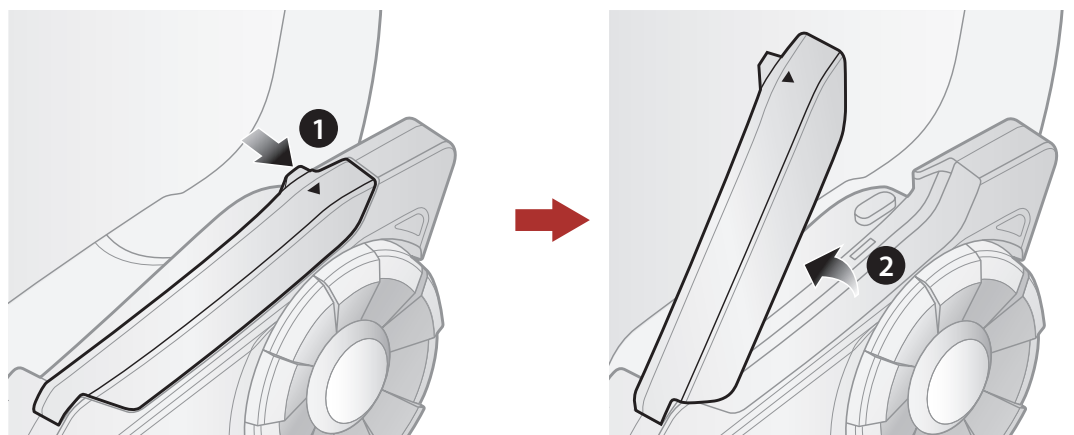



# 3. GETTING STARTED

## 3.1 Button Functions

Button Functions

Downloadable Sena Software


Powering On and Off

Charging

Checking the Battery Level

Volume Adjustment

Configuration Menu

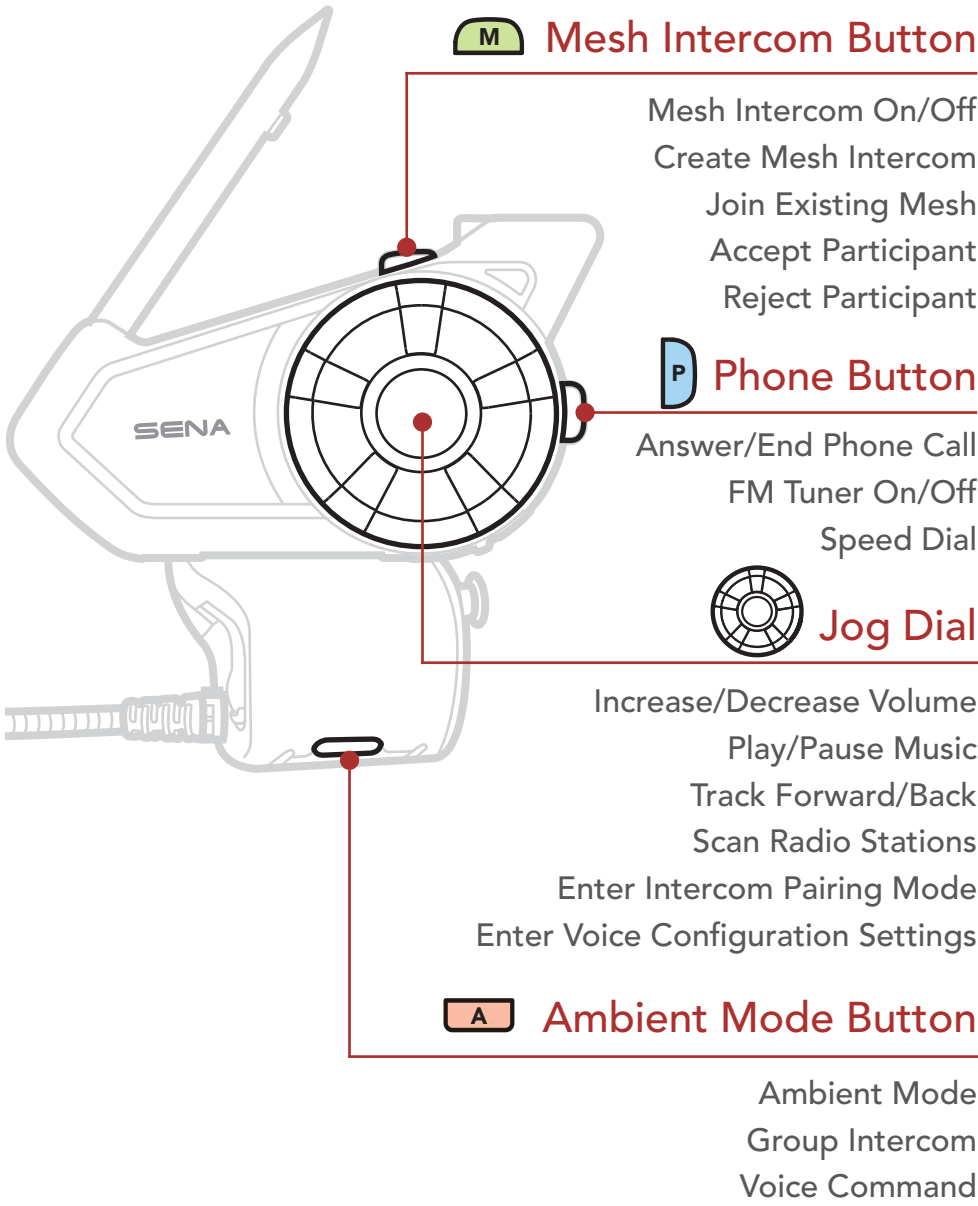



## 3. GETTING STARTED

### 3.2 Downloadable Sena Software

Button  
Functions

Downloadable  
Sena Software

Powering On  
and Off

Charging

Checking the  
Battery Level

Volume  
Adjustment

Configuration  
Menu

#### 3.2.1 Sena 30K Utility App

By simply pairing your phone with your headset, you can use the **Sena 30K Utility App** for quicker and easier set up and management.

- App Features
  - Mesh Intercom, Bluetooth Intercom, Music, FM Radio, Device settings, Quick Start Guide, and User's Guide.
- Download
  - Android: Google Play Store > '**Sena 30K Utility**'
  - iOS: App Store > '**Sena 30K Utility**'



#### 3.2.2 Sena Device Manager

The **Sena Device Manager** allows you to upgrade the firmware and configure its settings directly from your PC or Apple computer. Download the **Sena Device Manager** from [sena.com](https://sena.com).





### 3. GETTING STARTED

#### 3.3 Powering On and Off

Press and hold the **Jog Dial** and **Phone Button** at the same time to turn the headset on or off.

##### Powering On

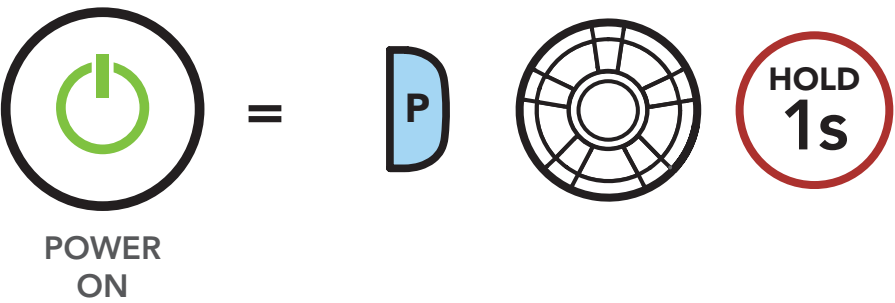


*"Preparing headset"*



*"Hello"*

##### Powering Off

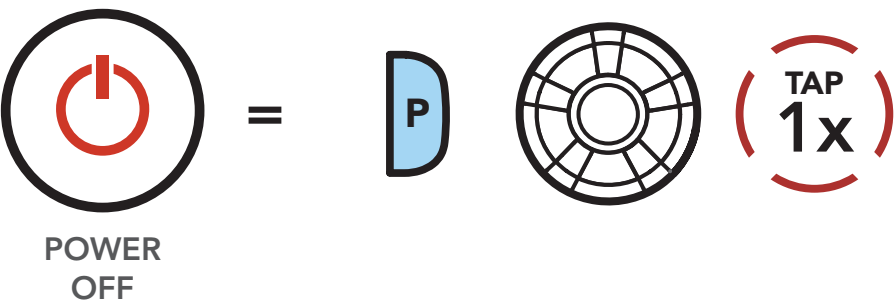

**Note:** If the Voice Command setting is disabled, the "Hello" voice prompt will be heard instantly after powering on the headset. Please refer to **Section 12: "Voice Command"** for more details.

Button  
Functions

Downloadable  
Sena Software

Powering On  
and Off

Charging

Checking the  
Battery Level

Volume  
Adjustment

Configuration  
Menu



### 3. GETTING STARTED

#### 3.4 Charging

Button  
Functions

Charging the Headset

Downloadable  
Sena Software

Powering On  
and Off

Charging

Checking the  
Battery Level

Volume  
Adjustment

Configuration  
Menu

DC Power Charging &  
Firmware Upgrade Port



The headset will be fully charged in about 1.5 hours.  
(The charging time may vary depending on the  
charging method.)

**Note:**

- The headset includes a **Fast Charging** feature which allows it to charge quickly over a short period of time. For example, a user can get 5 hours of talk time after charging the headset for 20 minutes.
- Any 3rd party USB charger can be used with Sena products if the charger is approved by either the FCC, CE, IC or other locally approved agencies that Sena accepts.
- The headset is compatible with 5 V input USB-charged devices only.







# 3. GETTING STARTED

## 3.5 Checking the Battery Level

Instruction is for when powering the headset on.

### Visual Method

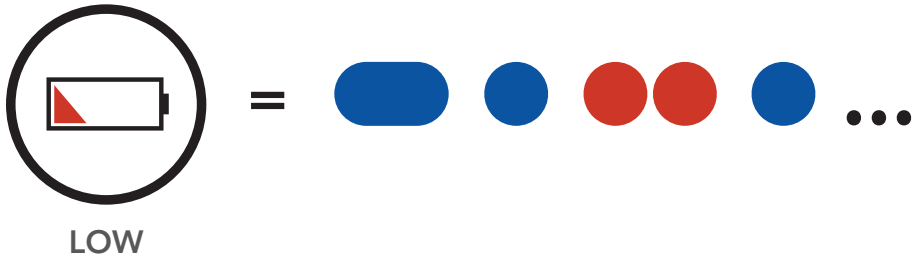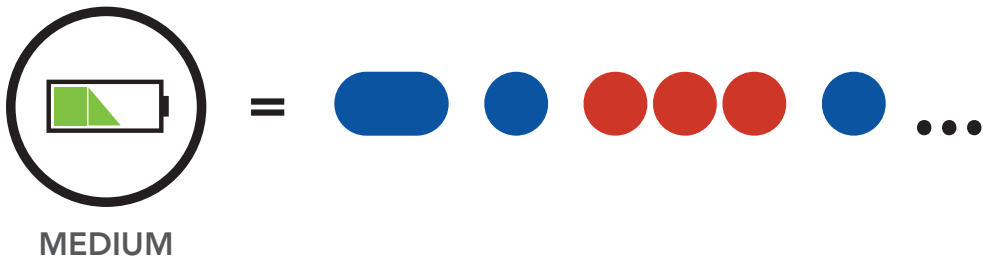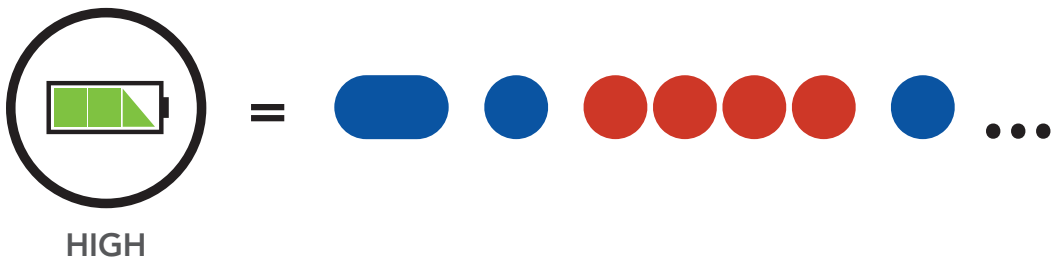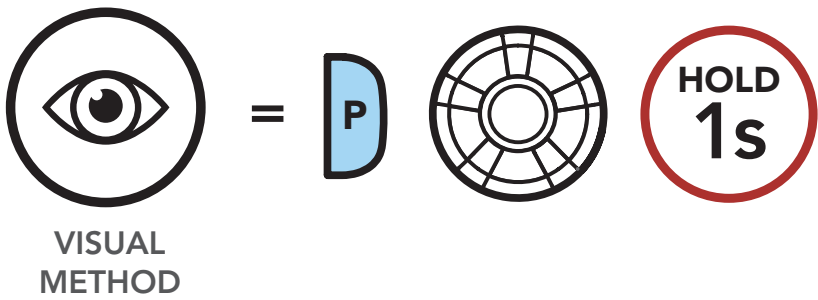

Button Functions

Downloadable Sena Software

Powering On and Off

Charging

Checking the Battery Level

Volume Adjustment

Configuration Menu




## 3. GETTING STARTED

### 3.6 Volume Adjustment


You can raise or lower the volume by rotating the **Jog Dial** clockwise or counterclockwise. Volume is set and maintained independently at different levels for each audio source (i.e., phone, intercom), even when the headset is rebooted.

#### Volume Up

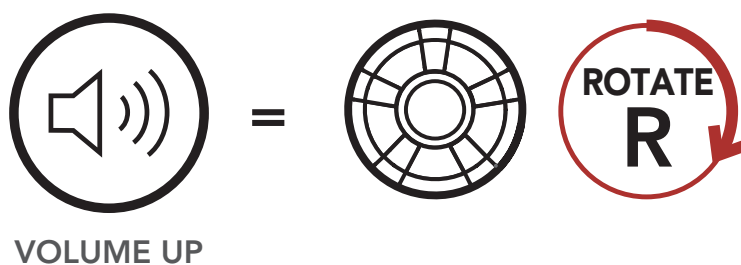

VOLUME UP

#### Volume Down

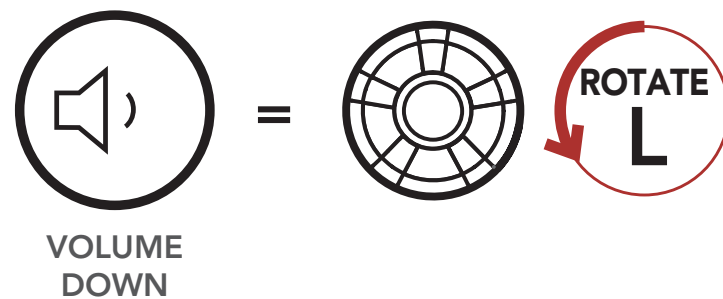

VOLUME  
DOWN

Button  
Functions

Downloadable  
Sena Software

Powering On  
and Off

Charging

Checking the  
Battery Level

Volume  
Adjustment

Configuration  
Menu






# 3. GETTING STARTED

## 3.7 Configuration Menu

The headset can be configured by following a series of voice prompts. Further details about each of these settings will be explained on the following pages.

- 1. To access the **Configuration Menu**, press and hold the **Jog Dial** for **10 seconds** until you hear the voice prompt, **"Configuration menu."**

### Accessing the Configuration Menu

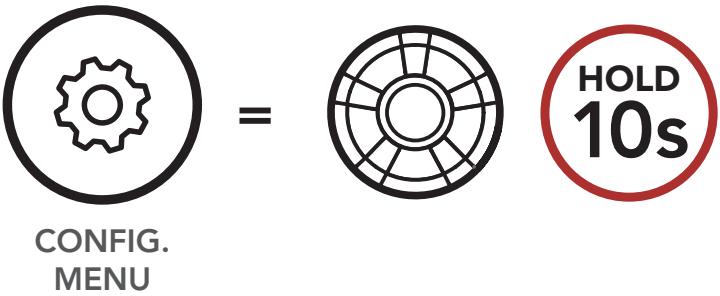

*"Configuration menu"*

Button Functions

Downloadable Sena Software

Powering On and Off

Charging

Checking the Battery Level

Volume Adjustment



Configuration Menu





### 3. GETTING STARTED

2. Rotate the **Jog Dial** clockwise or counterclockwise to navigate between the menus. You will hear voice prompts for each menu item. The list of functions is shown in the **"Headset Configuration Menu"** on page 28.

#### Navigating Forward through the Menu

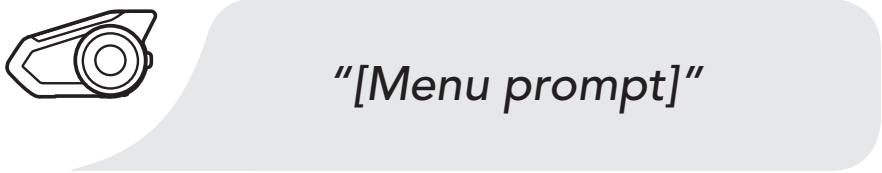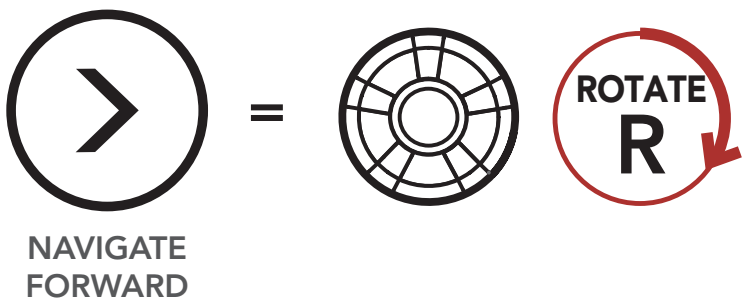

#### Navigating Backward through the Menu

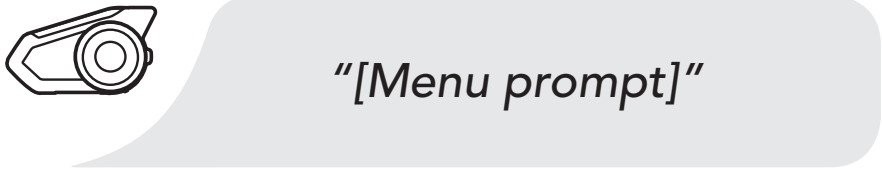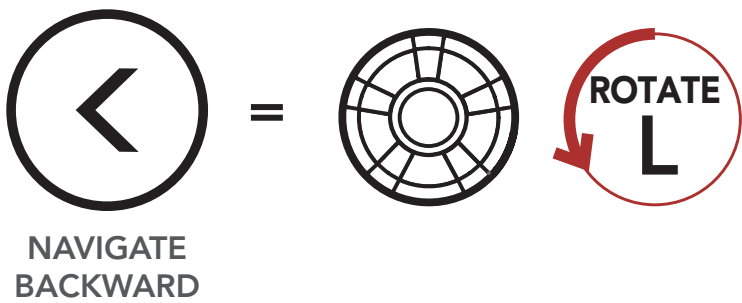

Button Functions

Downloadable Sena Software

Powering On and Off

Charging

Checking the Battery Level

Volume Adjustment


Configuration Menu



### 3. GETTING STARTED

3. You can enable the feature or execute the command by tapping the **Phone Button**.

Execute Menu Options

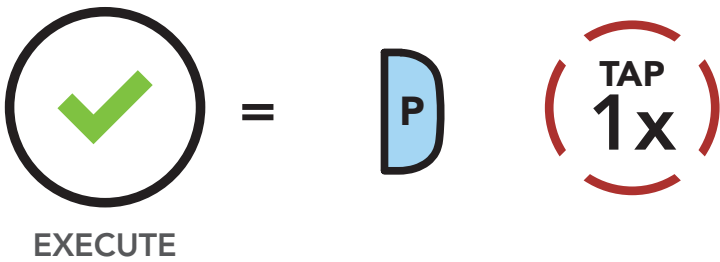

Headset Configuration Menu

Rotate the Jog Dial clockwise or counterclockwise	Tap the Phone Button
Delete All Pairings	Execute
Remote Control Pairing	Execute
Universal Intercom Pairing	Execute
Exit Configuration	Execute

Button Functions

Downloadable Sena Software

Powering On and Off

Charging

Checking the Battery Level

Volume Adjustment

Configuration Menu



# 4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES

Mobile Phone

Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter


Advanced Selective Pairing: Hands-Free or A2DP Stereo

GPS Pairing


When using the headset with other Bluetooth devices for the first time, they'll need to be "paired." This enables them to recognize and communicate with one another whenever they're within range.

The headset can pair with multiple Bluetooth devices such as a mobile phone, GPS, MP3 player or Sena SR10 Two-Way Radio Adapter via **Mobile Phone Pairing, Second Mobile Phone Pairing and GPS Pairing**. The headset can also be paired with up to three other Sena headsets.

Pairs with up to three Sena Headsets

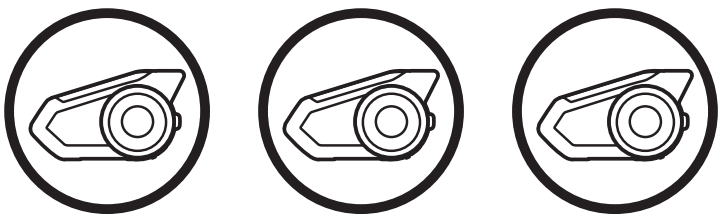

Also pairs with:

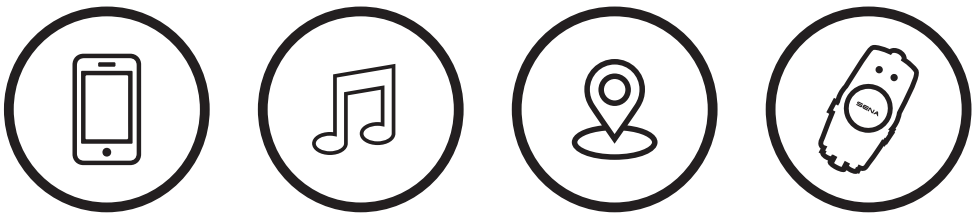

Mobile Phone      MP3 Player      GPS Devices      Sena SR10

**Note:** Bluetooth Specifications: Bluetooth 2.4 GHz ~ 2.48 GHz / max output power 0.097mW



# 4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES



- Mobile Phone
- Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter
- Advanced Selective Pairing: Hands-Free or A2DP Stereo
- GPS Pairing


## 4.1 Mobile Phone

There are two ways to pair the phone.

### 4.1.1 Pairing When the 30K is Turned Off

1. Press and hold the **Phone Button** and **Jog Dial** for **10 seconds** when the **30K** is turned off.

#### Mobile Phone Pairing

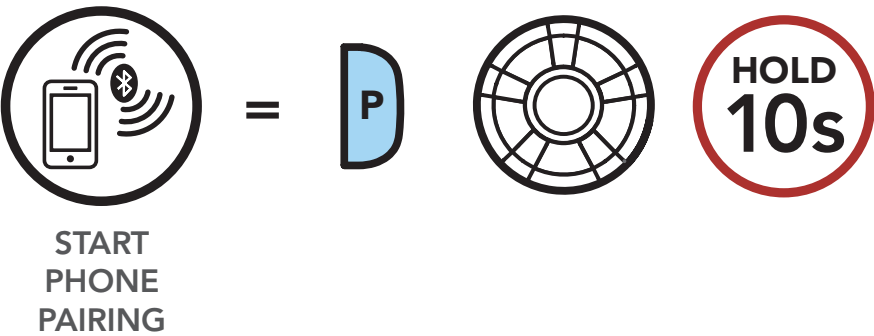


*"Phone pairing"*



Alternating blue and red flashing lights indicate **device is now discoverable**.

2. With your mobile phone in Bluetooth-pairing mode, select the headset in the list of devices detected.
3. If your mobile phone asks for a PIN, enter 0000.

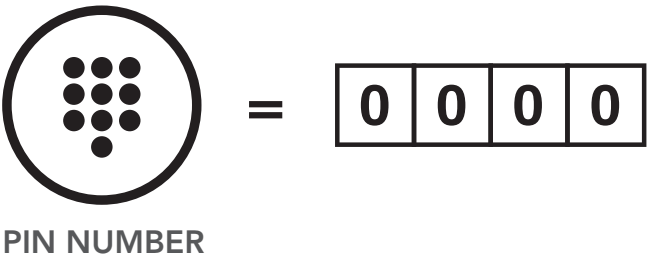



# 4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES





- Mobile Phone
- Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter
- Advanced Selective Pairing: Hands-Free or A2DP Stereo
- GPS Pairing

## 4.1.2 Pairing When the 30K is Turned On

1. Press and hold the **Phone Button** for **5 seconds** when the **30K** is turned on.

### Mobile Phone Pairing

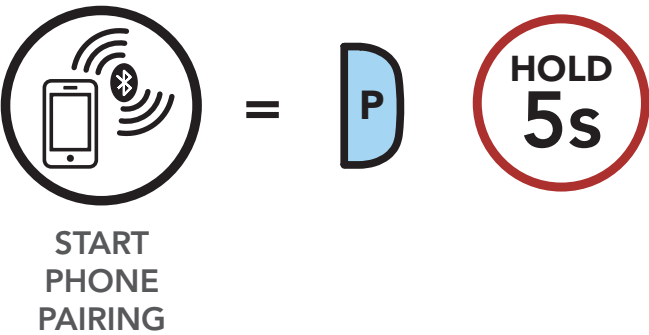


"Phone pairing"



LED STATUS

Alternating blue and red flashing lights indicate **device is now discoverable**.

2. With your mobile phone in Bluetooth-pairing mode, select the headset in the list of devices detected.
3. If your mobile phone asks for a PIN, enter 0000.

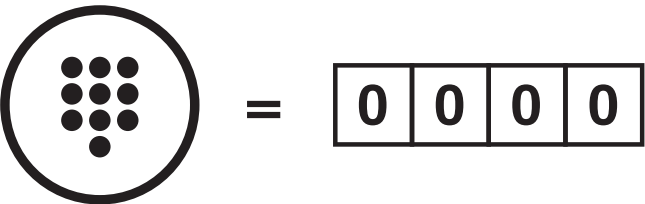

PIN NUMBER



# 4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES

Mobile Phone

Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter



Advanced Selective Pairing: Hands-Free or A2DP Stereo

GPS Pairing

## 4.2 Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter

- 1. Execute **Second Mobile Phone Pairing** by holding down the **Jog Dial** for **5 seconds**. Tap the **Phone Button** once within **2 seconds**.

### Second Mobile Phone Pairing

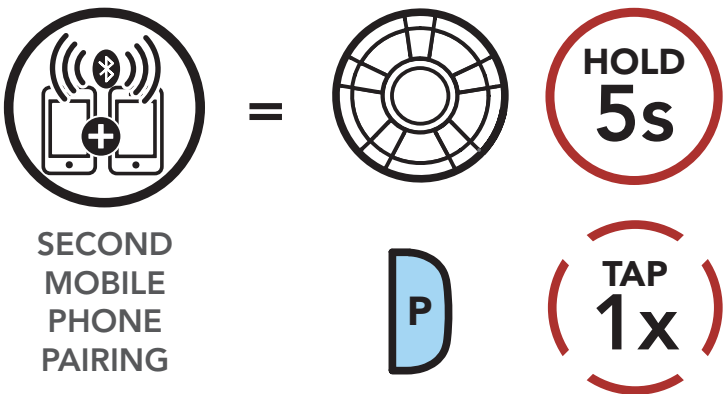


"Second mobile phone pairing"



LED STATUS


= Blue flashing lights indicates device is now discoverable.

- 2. With your mobile phone in Bluetooth-pairing mode, select the headset in the list of devices detected.
- 3. If your mobile phone asks for a PIN, enter 0000.

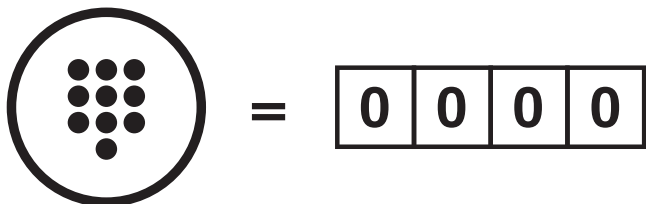

PIN NUMBER



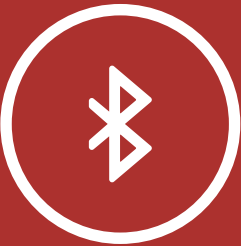

# 4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES

Mobile Phone

Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter

Advanced Selective Pairing: Hands-Free or A2DP Stereo

GPS Pairing


## 4.3 Advanced Selective Pairing: Hands-Free or A2DP Stereo

**Phone Pairing** allows the headset to establish two Bluetooth profiles: **Hands-Free** or **A2DP Stereo**. **Advanced Selective Pairing** allows the headset to separate the profiles to enable connection with two devices.

### 4.3.1 Phone Selective Pairing - Hands-Free Profile

- 1. Execute **Phone Selective Pairing** by holding down the **Phone Button** for **5 seconds**. Tap the **Phone Button** once within **2 seconds**.


#### Phone Selective Pairing

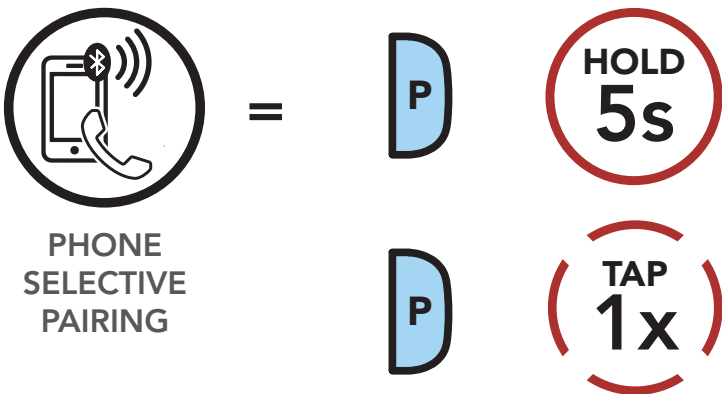

"Phone selective pairing"



= Blue flashing lights indicates **device is now discoverable**.

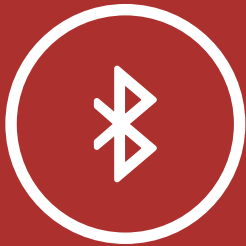

# 4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES




Mobile Phone

Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter

Advanced Selective Pairing: Hands-Free or A2DP Stereo

GPS Pairing

- 2. With your mobile phone in Bluetooth-pairing mode, select the headset in the list of devices detected.
- 3. If your mobile phone asks for a PIN, enter 0000.

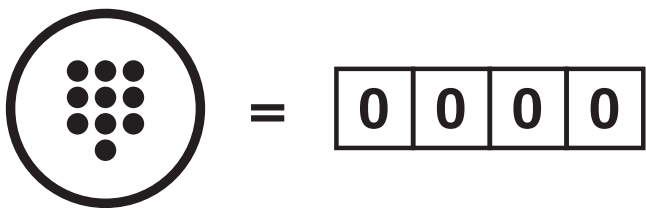


PIN NUMBER

## 4.3.2 Media Selective Pairing - A2DP Profile

- 1. Execute **Media Selective Pairing** by holding down the **Phone Button** for **5 seconds**. Tap the **Jog Dial** once within **2 seconds**.

### Media Selective Pairing

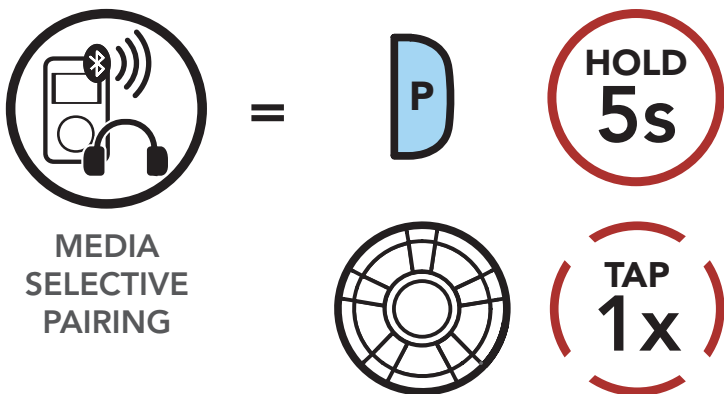

MEDIA SELECTIVE PAIRING



"Media selective pairing"




LED STATUS

= Red flashing lights indicate **device is now discoverable**.




# 4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES

- 2. With your mobile phone in Bluetooth-pairing mode, select the headset in the list of devices detected.
- 3. If your mobile phone asks for a PIN, enter 0000.

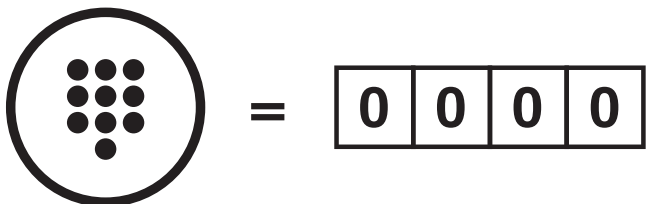

PIN NUMBER

- Mobile Phone
- Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter
- Advanced Selective Pairing: Hands-Free or A2DP Stereo
- GPS Pairing

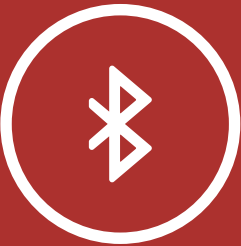

# 4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES

## 4.4 GPS Pairing

Mobile Phone



Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter

Advanced Selective Pairing: Hands-Free or A2DP Stereo


GPS Pairing

1. Execute **GPS Pairing** by holding down the **Jog Dial** for **5 seconds**. Within **2 seconds**, tap the **Phone Button** once to hear the voice prompt, **"Second mobile phone pairing"**. Again within **2 seconds**, tap the **Phone Button** to hear the voice prompt, **"GPS pairing"**.

### GPS Pairing

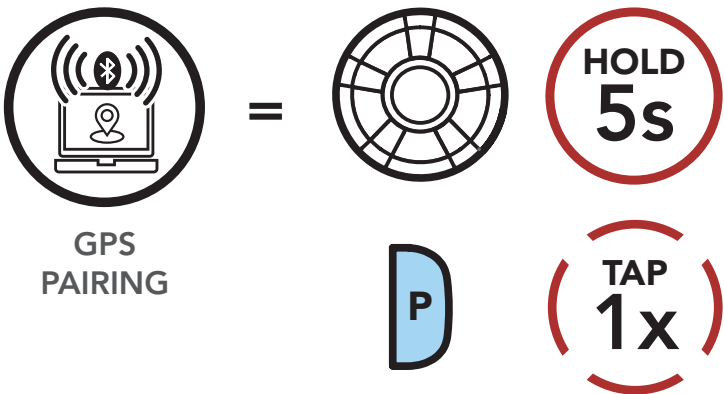

"Second mobile phone pairing"



"GPS pairing"



LED STATUS


= Green flashing lights indicates device is now discoverable.



# 4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES

- Mobile Phone
- Additional Mobile Phones, MP3 Player or Sena SR10 Two-Way Radio Adapter
- Advanced Selective Pairing: Hands-Free or A2DP Stereo
- GPS Pairing

- 2. With your Bluetooth device on the GPS navigation screen, select the headset in the list of devices detected.
- 3. If your Bluetooth device asks for a PIN, enter 0000.

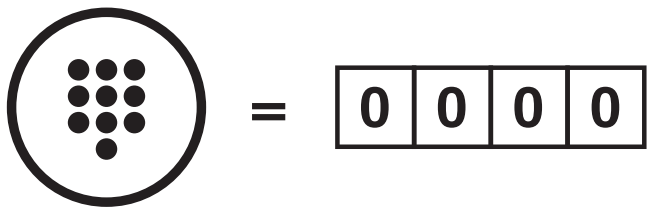

PIN NUMBER

**Note:** If you pair your GPS device via GPS Pairing, its instruction will not interrupt your Mesh Intercom conversations, but overlay with them. Bluetooth intercom conversations will be interrupted by GPS instructions.



# 5. MOBILE PHONE USAGE


## 5.1 Making and Answering Calls

Making and Answering Calls


Speed Dialing

VOX Phone


Answer a Call

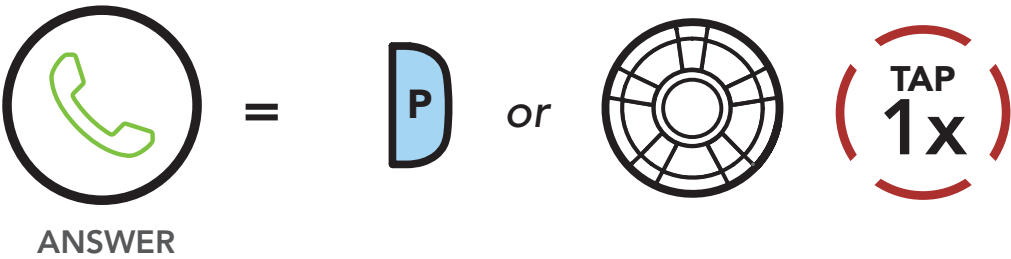


End a Call

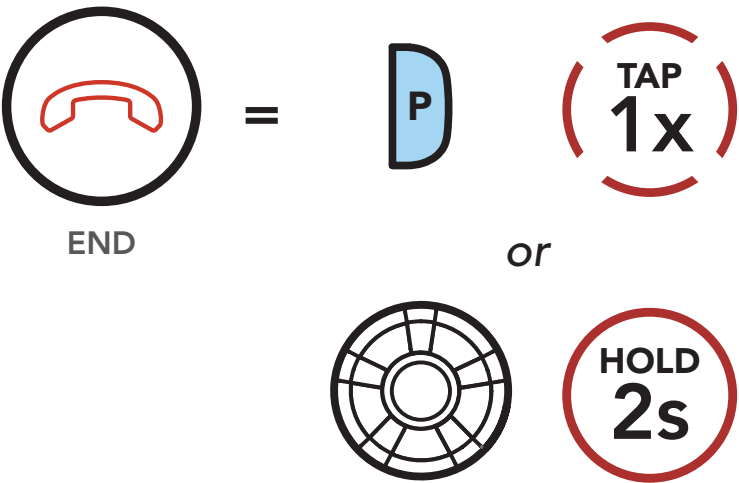

Reject a Call

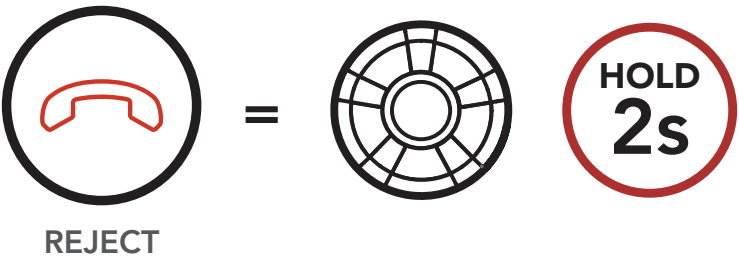

Make a Call with Voice Dialer

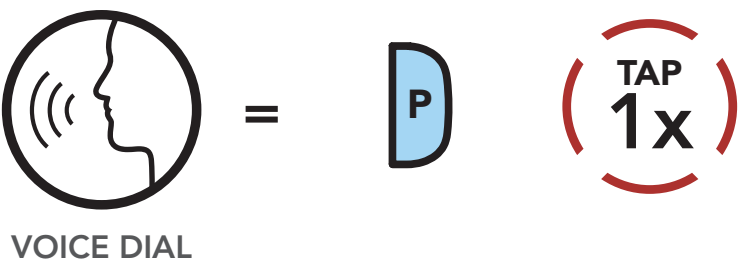

**Note:** If you have a GPS device connected, you will not hear its voice navigations during a phone call.



# 5. MOBILE PHONE USAGE

## 5.2 Speed Dialing

Making and Answering Calls

Speed Dialing

VOX Phone


### 5.2.1 Assigning Speed Dial Presets

Speed Dial Presets could be assigned in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

### 5.2.2 Using Speed Dial Presets

- 1. Tap the **Phone Button** twice to enter into the **Speed Dial** menu. You will hear the voice prompt, **"Speed dial."**


#### Enter Speed Dial Mode

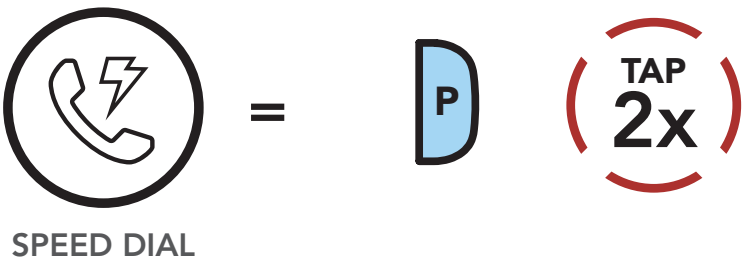


"Speed dial"


- 2. Rotate the **Jog Dial** clockwise or counterclockwise to navigate between the **Speed Dial Presets**.

#### Navigate Forward through Speed Dial Preset Numbers

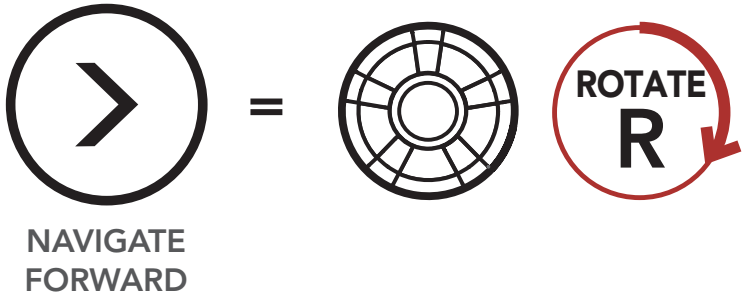

#### Navigate Backward through Speed Dial Preset Numbers

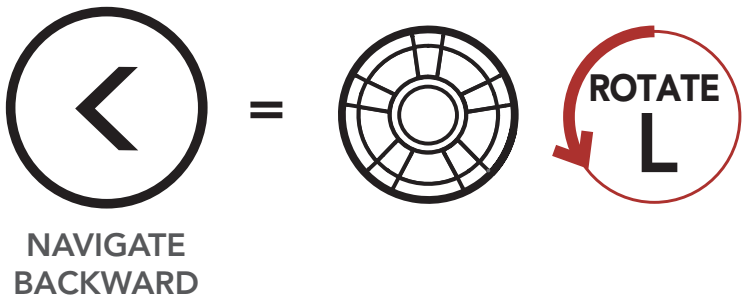

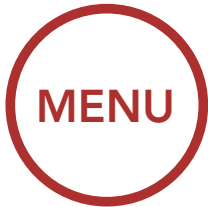

Making and  
Answering  
Calls


Speed Dialing

VOX Phone

# 5. MOBILE PHONE USAGE

3. To call one of your **Speed Dial Presets**, tap the **Phone Button** when you hear the prompt, **"Speed dial (#)."**


Call a Speed Dial Preset Number

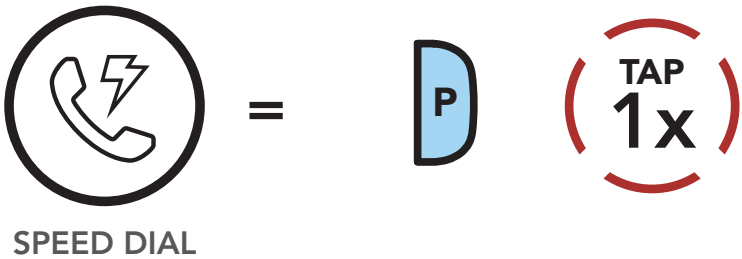

"Speed dial (#)"

4. To redial the last number called, tap the **Phone Button** when you hear the prompt, **"Last number redial."**

Redial Last Number

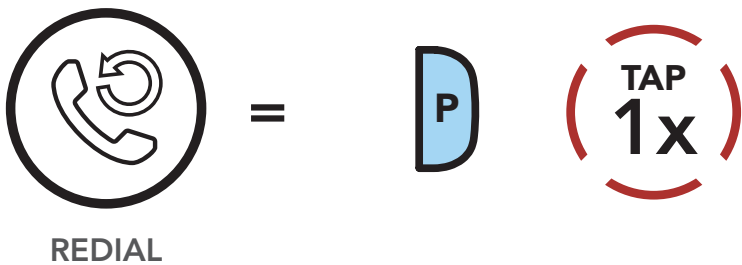

"Last number redial"





## 5. MOBILE PHONE USAGE

### 5.3 VOX Phone (Default: Enable)

Making and  
Answering  
Calls

Speed Dialing

VOX Phone

A **VOX Phone** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

With **VOX Phone** enabled, you can answer incoming calls by simply saying a word loudly enough, unless you are connected to intercom. For example, when you hear a series of beeps for an incoming call, you can answer the phone by saying **"Hello"** or any other word loudly. If this mode is disabled, you have to tap the **Jog Dial** or the **Phone Button** to answer an incoming call.





# 6. STEREO MUSIC

## 6.1 Playing Music with Bluetooth Devices

- 1. To play or pause music, press and hold the **Jog Dial** for **1 second** until you hear a double beep.


Play/Pause

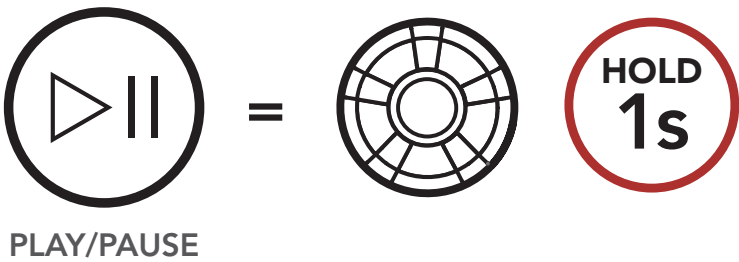


"[Beep, Beep]"

- 2. To adjust the volume, rotate the **Jog Dial** clockwise or counterclockwise.

Volume Up

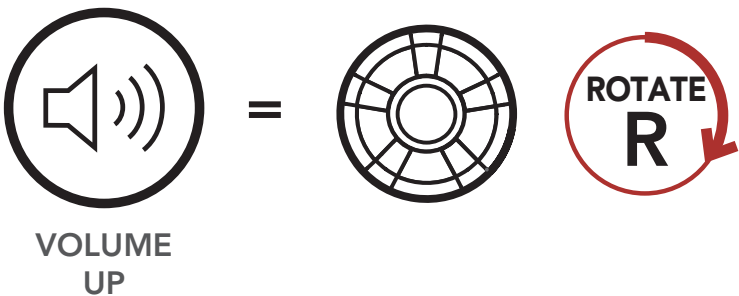

Volume Down

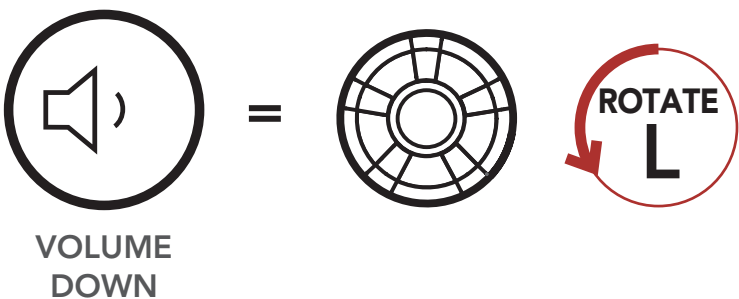

Playing Music with Bluetooth Devices

Playing Music with non-Bluetooth Devices

Music Sharing

Audio Equalizer


Smart Volume Control




# 6. STEREO MUSIC

3. To track forward or back, rotate while pressing the **Jog Dial** clockwise or counterclockwise.

## Track Forward

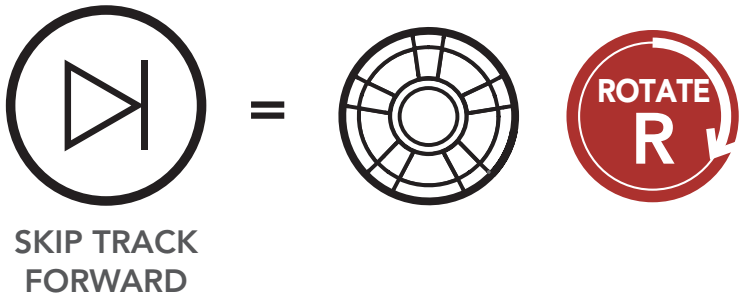


## Track Backward

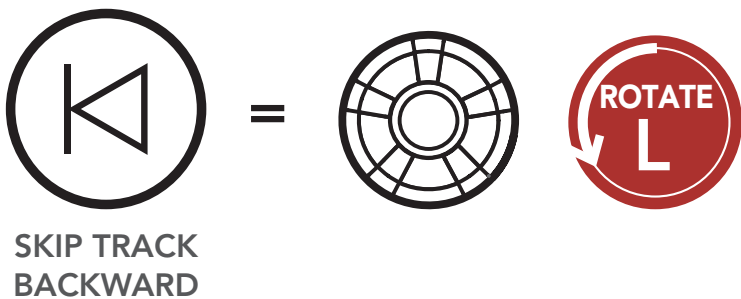

## 6.2 Playing Music with non-Bluetooth Devices

You can play music that is stored on non-Bluetooth devices such as MP3 players. To connect your device to the headset, plug the enclosed 2.5 to 3.5 mm audio cable into the AUX ports, both on the headset and on your device.

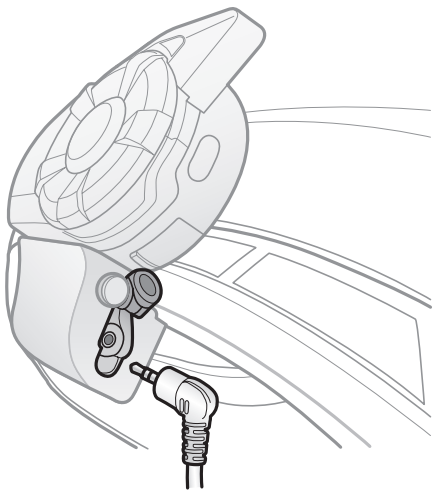





## 6. STEREO MUSIC

To adjust the volume, rotate the **Jog Dial** clockwise or counterclockwise. You can also adjust the volume directly on the connected device.

### Volume Up

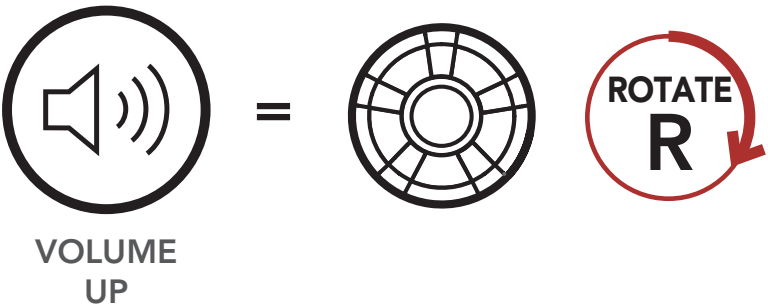

### Volume Down

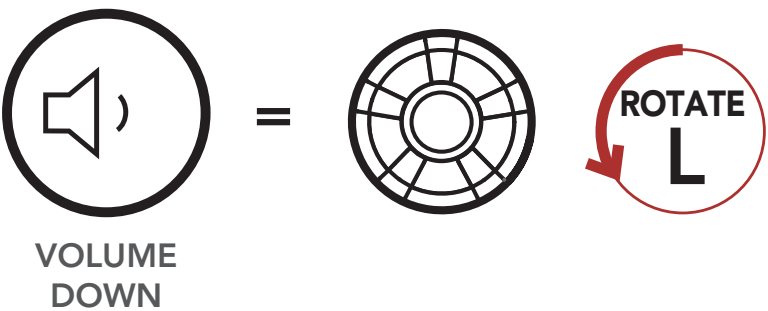

### 6.3 Music Sharing

You can start sharing music with one intercom friend using Bluetooth stereo music during a two-way intercom conversation and one participant of a Mesh. Both you and your intercom friend can remotely control music playback such as track forward and track back. If you start sharing music while Bluetooth intercom and Mesh Intercom are running at the same time, then music shared during Bluetooth intercom will take priority over music shared during Mesh Intercom. The Creator will send a request message to a headset connected during Mesh Intercom and will share music with the first participant that accepts the request.





# 6. STEREO MUSIC

## Bluetooth Intercom Music Sharing

Playing Music with Bluetooth Devices

Playing Music with non-Bluetooth Devices



Music Sharing

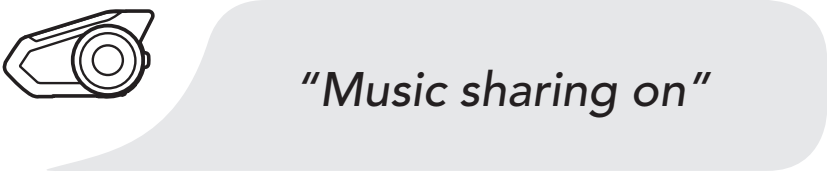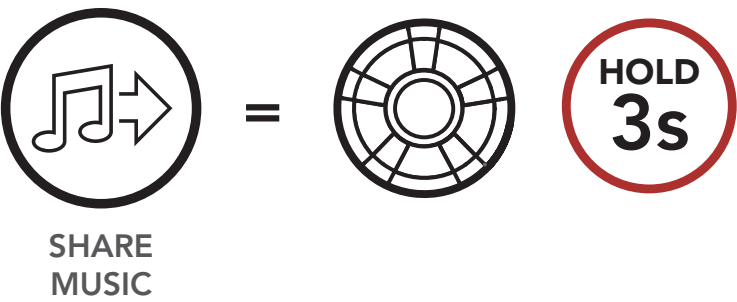




## Mesh Intercom Music Sharing [Creator]

Audio Equalizer

Smart Volume Control

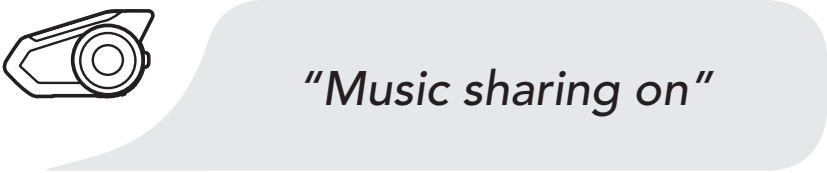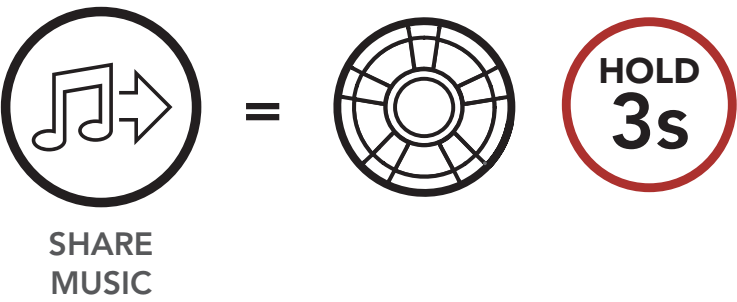

## [Participant]

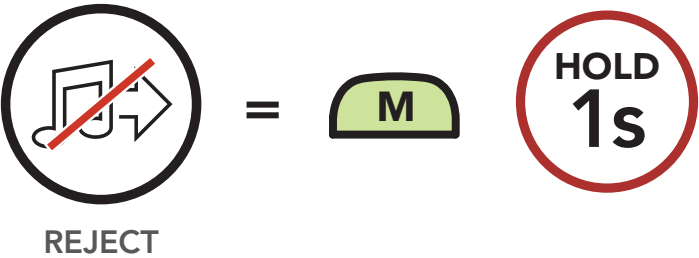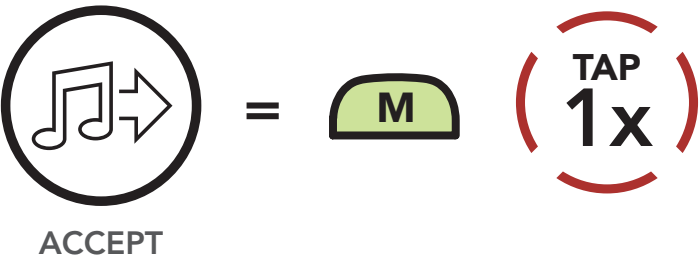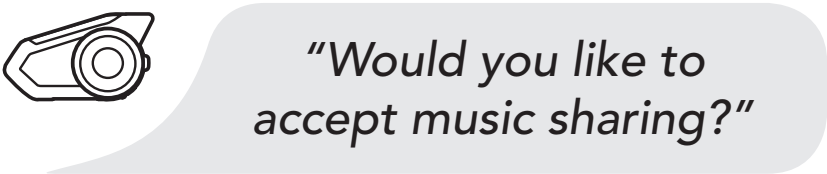



## 6. STEREO MUSIC

### 6.4 Audio Equalizer (Default: Off)

You can use the **Audio Equalizer** to increase/decrease the decibel level of different frequency ranges of audio.

**Balance** will adjust all of the frequency ranges to be the same volume level (0 dB). **Bass Boost** will increase the bass range of audio (20 Hz - 250 Hz).

**Mid Boost** will increase the mid range of audio (250 Hz - 4 kHz). **Treble Boost** will increase the high range of audio (4 kHz - 20 kHz).

### 6.5 Smart Volume Control (Default: Disable)

A **Smart Volume Control** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

Enabling **Smart Volume Control** automatically changes the level of the speaker volume based on the level of the environment noise. You can enable it by setting the sensitivity to low, medium or high.

Playing Music with Bluetooth Devices

Playing Music with non-Bluetooth Devices

Music Sharing

Audio Equalizer

Smart Volume Control



## 7. MESH INTERCOM

### 7.1 What is Mesh Intercom?

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh

Reset Mesh


Toggling Open Mesh/Group Mesh

Enable/Disable Mic (Default: Enable)

**Mesh Intercom™** is a dynamic communication system created by Sena that provides instant and effortless bike-to-bike communication without a pre-grouping process. **Mesh Intercom** allows riders to connect and communicate with nearby users without the need to pair each headset together.

The working distance between each **30K** in **Mesh Intercom** can be up to 2 km (1.2 miles) in open terrain. In open terrain, the **Mesh** can be extended up to 8 km (5 miles) between a minimum of six users. Within the same channel in **Open Mesh™** or the same private group in **Group Mesh™**, six users can talk at the same time and enjoy the optimal quality for their conversation.

**Mesh Intercom**

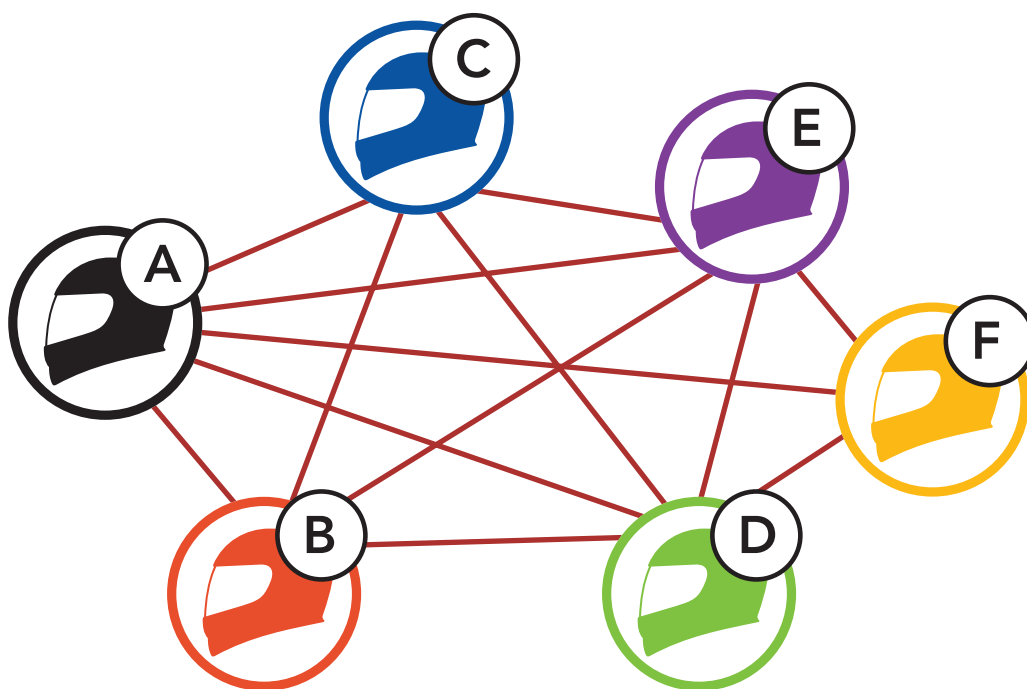





# 7. MESH INTERCOM

## 7.1.1 Open Mesh

**Open Mesh** is an open group intercom function. Users can freely communicate with each other in the same **Open Mesh** channel and select which channel (1-9) to use through the headset.

It can connect with a virtually unlimited number of users in each channel.

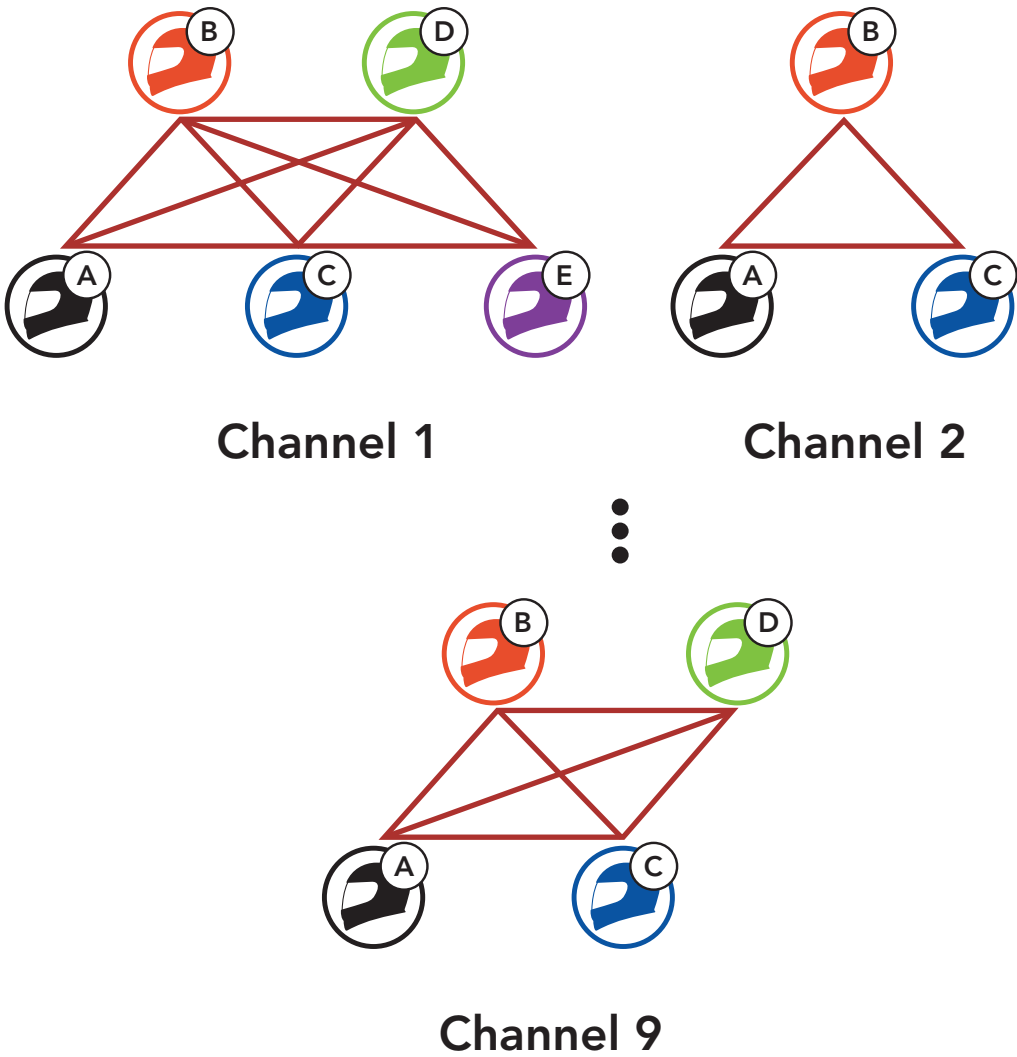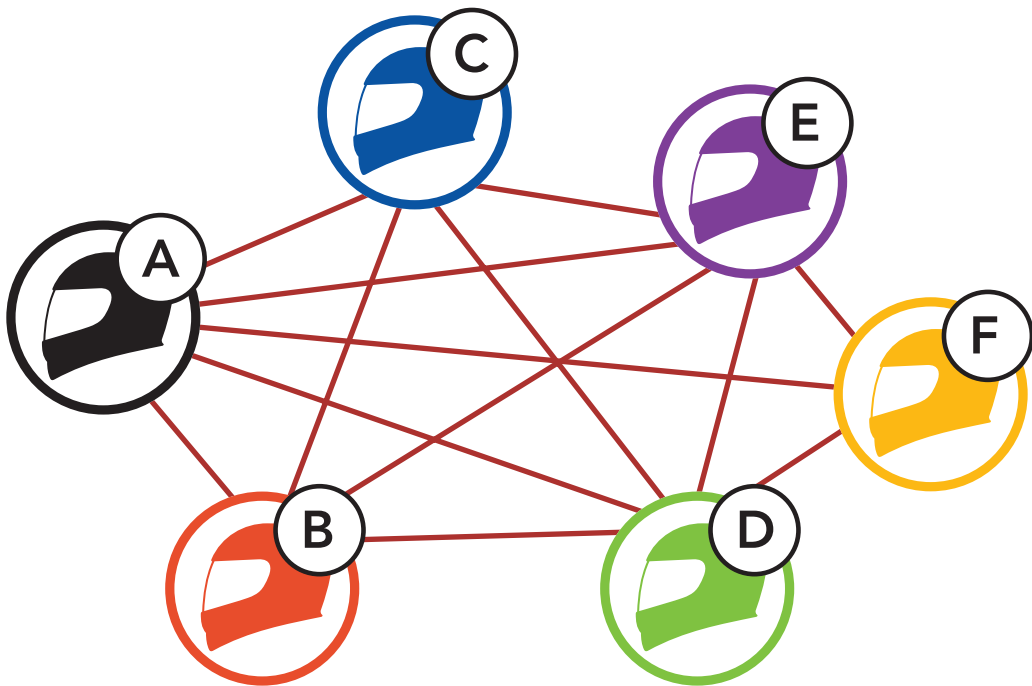

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh

Reset Mesh

Toggling Open Mesh/Group Mesh

Enable/Disable Mic (Default: Enable)






# 7. MESH INTERCOM

## 7.1.2 Group Mesh

**Group Mesh** is a closed group intercom function that allows users to join, leave, or rejoin a group intercom conversation without pairing each headset. Users can freely communicate with each other in the same private group in **Group Mesh**.

For closed intercom conversations using **Mesh Intercom**, a **Group Mesh** needs to be created by the users. When users create a private group in **Group Mesh** by **Mesh Grouping**, the headset automatically switches from **Open Mesh** to **Group Mesh**. Up to 24 users can all be connected in each private group.

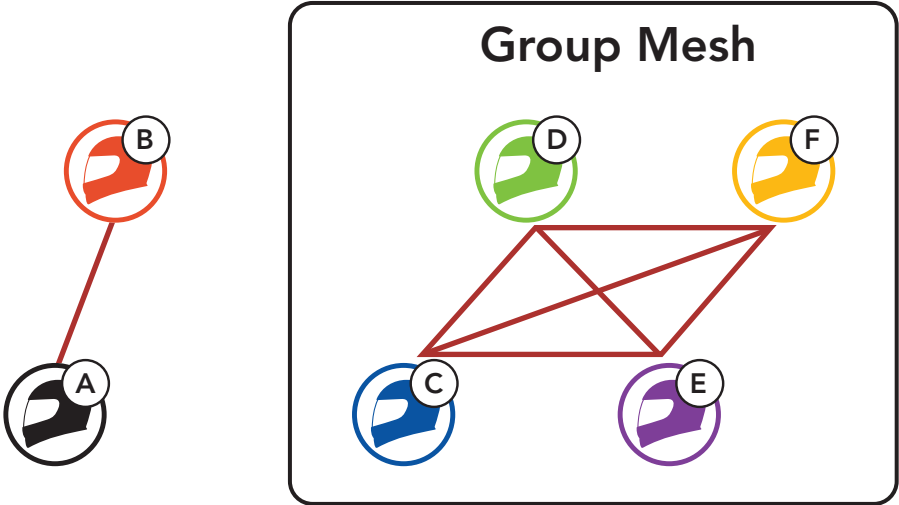

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh

Reset Mesh

Toggling Open Mesh/Group Mesh

Enable/Disable Mic (Default: Enable)





# 7. MESH INTERCOM

## 7.2 Starting Mesh Intercom


When **Mesh Intercom** is enabled, the **30K** will automatically connect to nearby **30K** users and allow them to talk to each other by pressing the **Mesh Intercom Button**.

### Mesh Intercom On

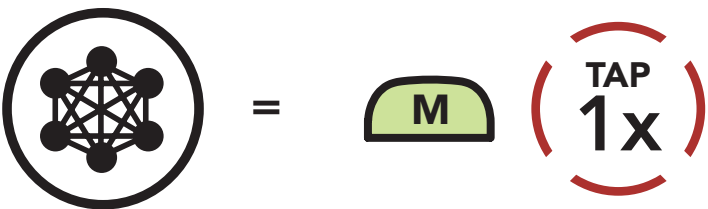

"Mesh intercom on"

### Mesh Intercom Off

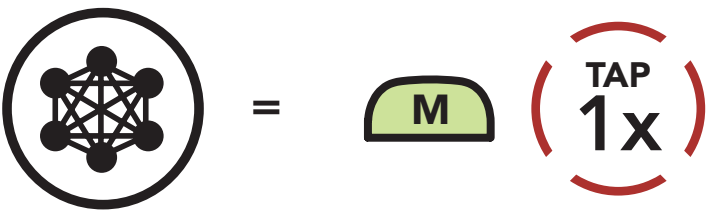

"Mesh intercom off"

**Note:** **Open Mesh** and **Group Mesh** cannot communicate with the previous modes **Public Mode** and **Private Mode**. In case of no communication, **the headset should be upgraded to the latest firmware**.

## 7.3 Using the Mesh in Open Mesh

When **Mesh Intercom** is enabled, the headset will be in **Open Mesh (default: channel 1)** initially.

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh

Reset Mesh

Toggling Open Mesh/Group Mesh


Enable/Disable Mic (Default: Enable)




# 7. MESH INTERCOM

## 7.3.1 Channel Setting (Default: channel 1)

If the **Open Mesh** communication experiences interference because other groups are also using **channel 1 (default)**, change the channel. You can select from channels 1 to 9.

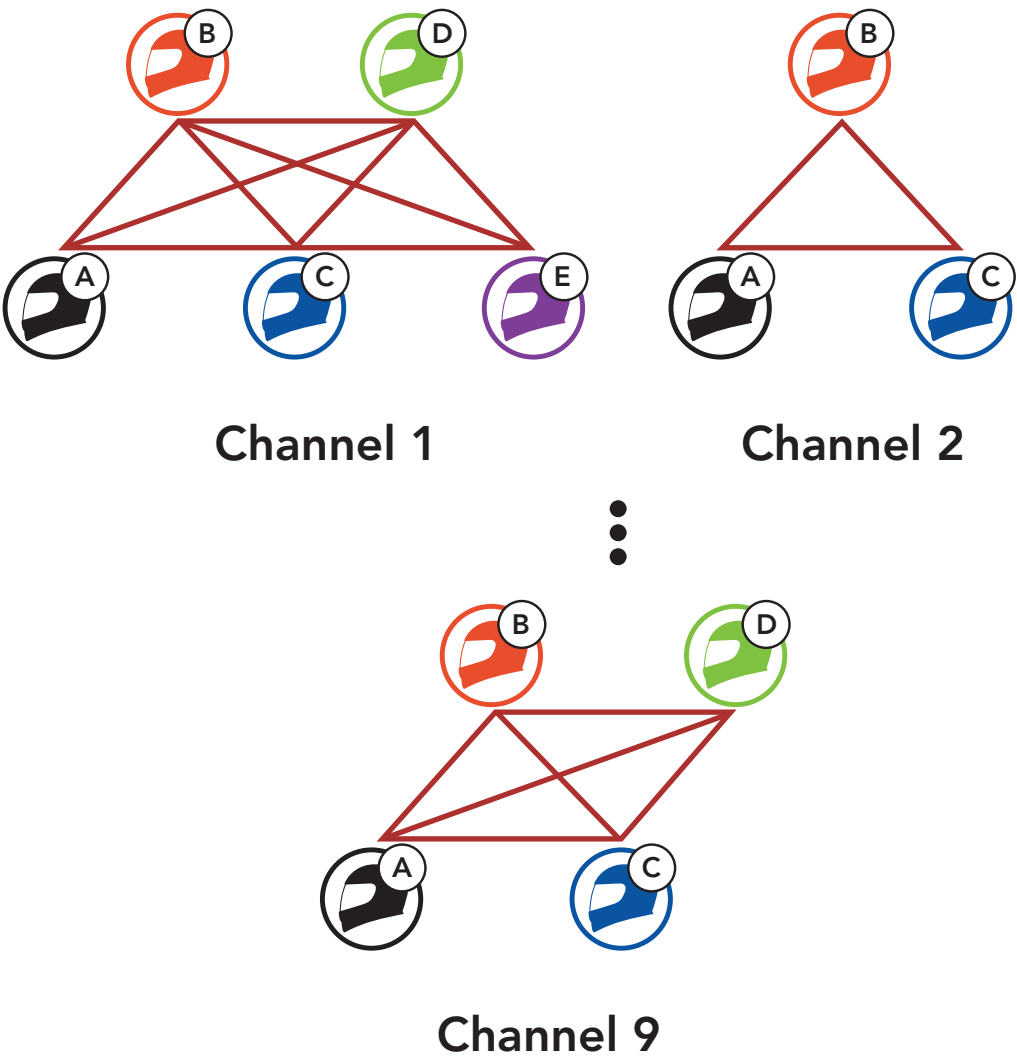

Enter into the Channel Setting

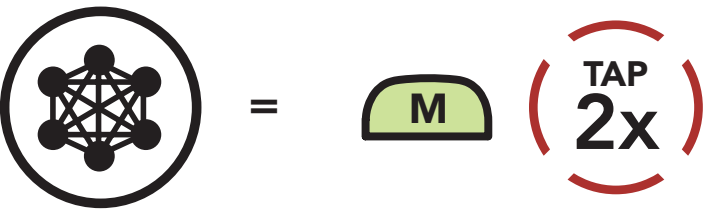

"Channel setting, 1"





# 7. MESH INTERCOM

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh


Using Mesh in Group Mesh

Reset Mesh


Toggling Open Mesh/Group Mesh

Enable/Disable Mic (Default: Enable)

Navigate Between Channels  
(1 → 2 → ... → 8 → 9 → Exit → 1 → ...)

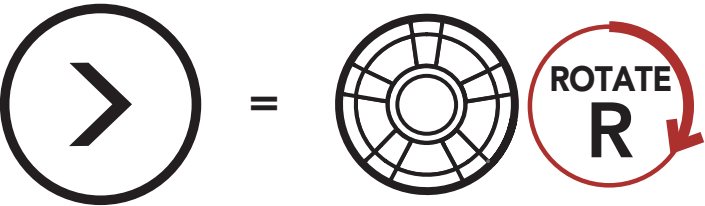


or

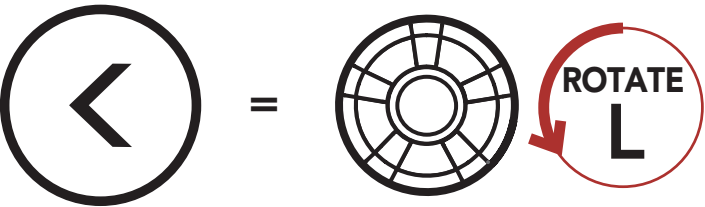

"#"



Save the Channel

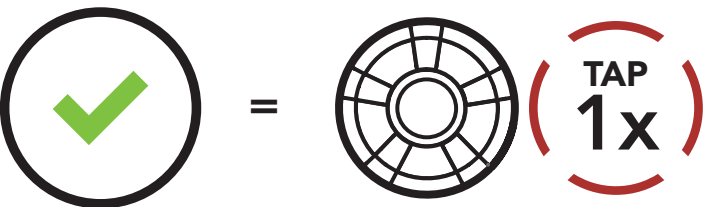

"Channel is set, channel #"

- Note:**
- **Channel Setting** always starts with channel 1.
  - If you do not press any button for approximately **10 seconds** in a specific channel, the channel is automatically saved.
  - If you want to cancel during **Channel Setting**, tap the **Phone Button**.
  - The channel will be remembered even if you turn off the **30K**.
  - You can also change the **Channel Setting** of the headset through the **Sena Device Manager** or the **Sena 30K Utility App**.




# 7. MESH INTERCOM

## 7.4 Using Mesh in Group Mesh

### 7.4.1 Creating a Group Mesh

Creating a **Group Mesh** requires **two or more Open Mesh** users.

Open Mesh

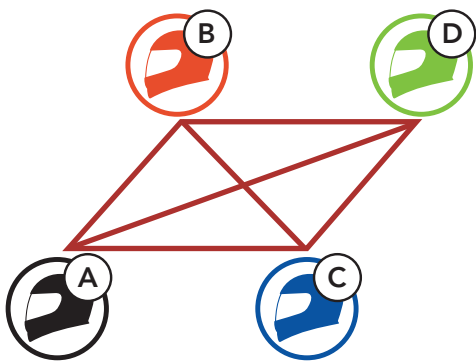

- 1. Enter into **Mesh Grouping** to create a **Group Mesh**.



YOU

and

=



FRIEND



"Mesh Grouping"

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh

Reset Mesh


Toggling Open Mesh/Group Mesh

Enable/Disable Mic (Default: Enable)



## 7. MESH INTERCOM

2. The headsets complete **Mesh Grouping** and automatically switch from **Open Mesh** to **Group Mesh**.



*"Group Mesh"*

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh


Using Mesh in Group Mesh

Reset Mesh


Toggling Open Mesh/Group Mesh

Enable/Disable Mic (Default: Enable)

Open Mesh

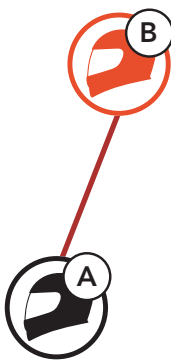

Group Mesh

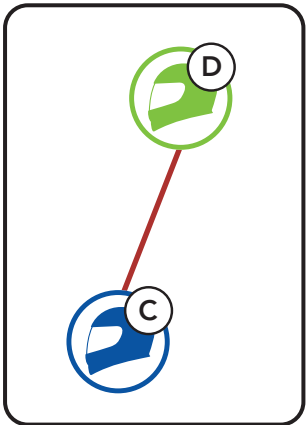


- Note:**
- If the **Mesh Grouping** is not completed within **30 seconds**, users will hear a voice prompt, **"Grouping failed"**.
  - If you want to cancel during the **Mesh Grouping**, tap the **Mesh Intercom Button** or **Phone Button**.


### 7.4.2 Joining an Existing Group Mesh

One of the members in an **Existing Group Mesh** can allow new members in **Open Mesh** to join the **Existing Group Mesh**.

New Members

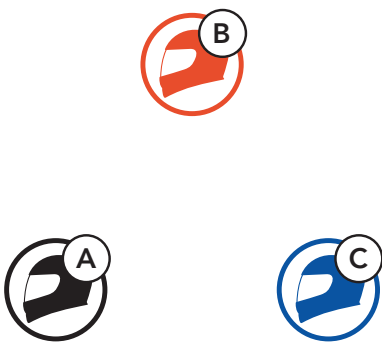

Existing Group Mesh and Current Members

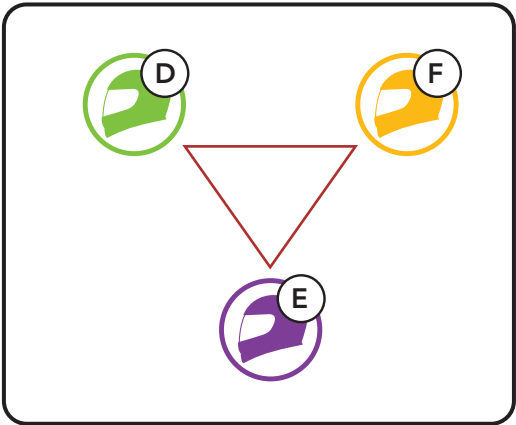



# 7. MESH INTERCOM

1. **One of the current members** and a **new member** enter into **Mesh Grouping** to join the **Existing Group Mesh**.




YOU  
(NEW  
MEMBER)

and

=



CURRENT  
MEMBER  
IN GROUP  
MESH




"Mesh Grouping"

2. The headsets complete **Mesh Grouping**.  
The new members will hear a voice prompt as their headsets automatically switch from **Open Mesh** to **Group Mesh**.



"Group Mesh"

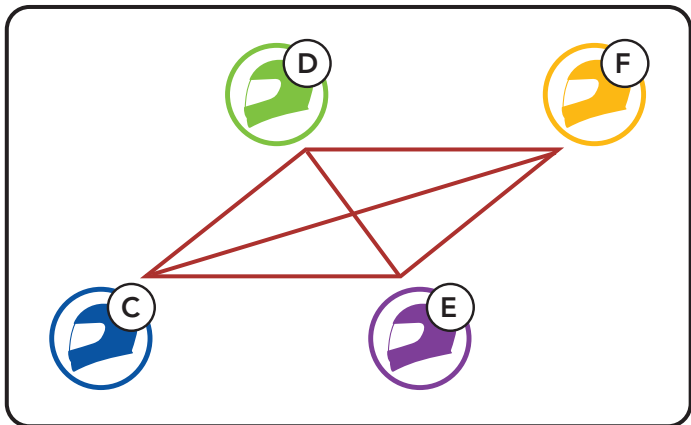



## 7. MESH INTERCOM

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh

Reset Mesh


Toggling Open Mesh/Group Mesh

Enable/Disable Mic (Default: Enable)

**Note:** If the **Mesh Grouping** is not completed within **30 seconds**, the current members will hear a low tone double beep and the new member will hear a voice prompt, **"Grouping failed"**.

### 7.5 Reset Mesh

If a headset in an **Open Mesh** or **Group Mesh** resets the **Mesh**, it will automatically return to **Open Mesh** (default: channel 1).

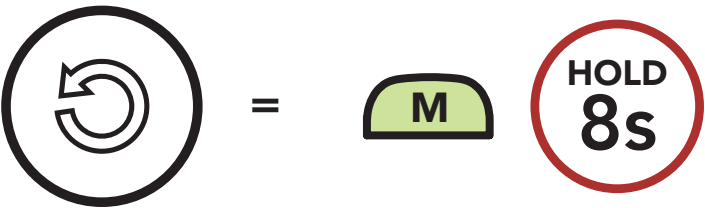


### 7.6 Toggling Open Mesh/Group Mesh

Users are able to toggle between **Open Mesh** and **Group Mesh** without resetting the **Mesh**. This allows users to keep the **Group Mesh Network** connection information while in **Open Mesh**.

Users can toggle to **Group Mesh** to communicate with participants from the stored **Group Mesh Network** connection information.

**Toggle Between Open Mesh and Group Mesh**

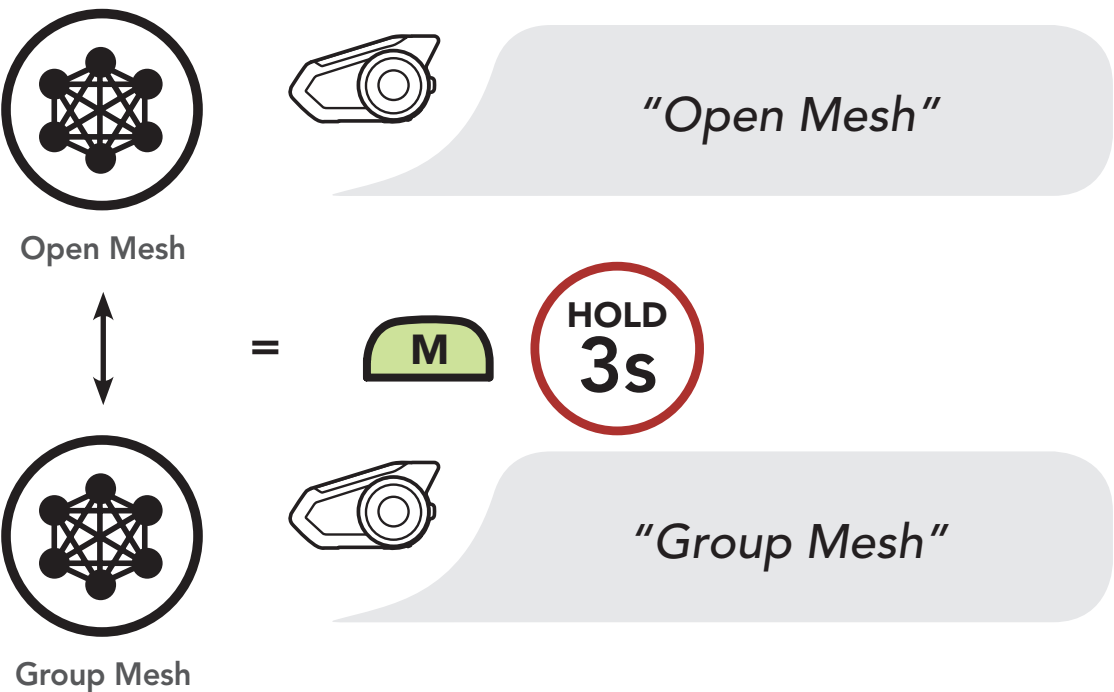





## 7. MESH INTERCOM

**Note:** If you have never participated in **Group Mesh**, you cannot toggle between **Open Mesh** and **Group Mesh**. You will hear a voice prompt, “**No Group Available**”.

What is Mesh Intercom?

Starting Mesh Intercom

Using the Mesh in Open Mesh

Using Mesh in Group Mesh

Reset Mesh


Toggling Open Mesh/Group Mesh

Enable/Disable Mic (Default: Enable)

### 7.7 Enable/Disable Mic (Default: Enable)

Users can enable/disable the microphone when communicating in a **Mesh Intercom**.

Enable/Disable the Microphone

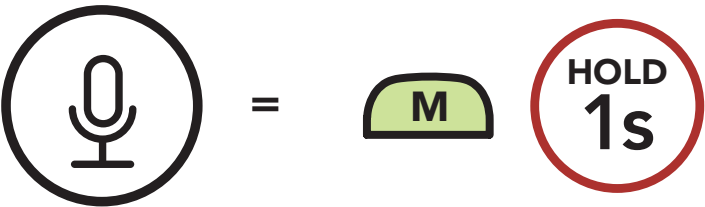




# 8. BLUETOOTH INTERCOM SETUP

## 8.1 Intercom Pairing


Up to three people can communicate via intercom with the headset simply by pairing their headsets.

### Pairing with Intercom Friends

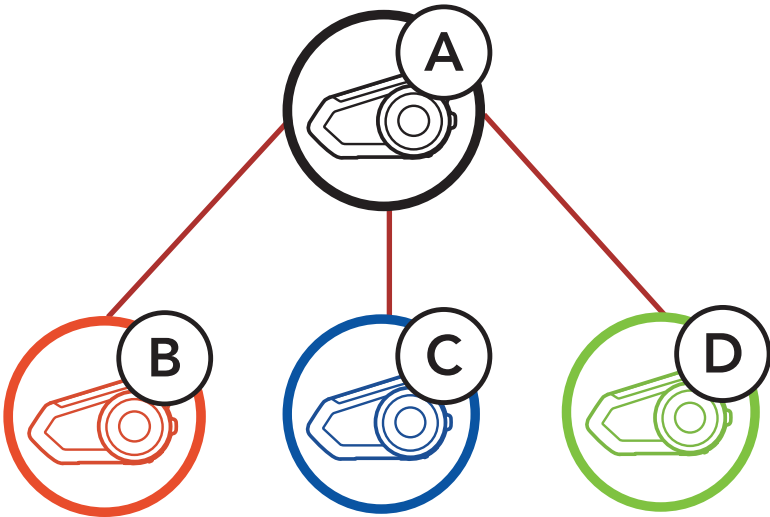

- 1. Press and hold the **Jog Dials** of two headsets for **5 seconds** until you hear the voice prompt, **"Intercom pairing"**.

### Pairing Headset A with Headset B

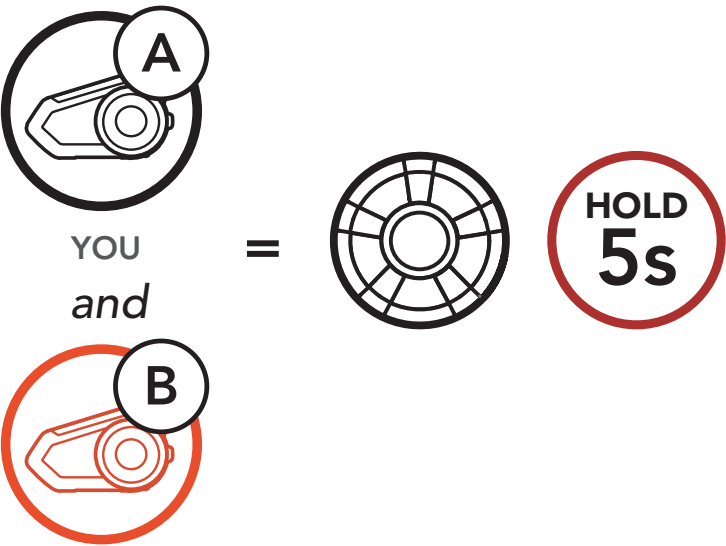

*"Intercom pairing"*



LED STATUS



= Red flashing lights indicate device is now discoverable.

- Intercom Pairing
- Two-Way Intercom
- Multi-Way Intercom
- Three-Way Conference Phone Call with Intercom Users
- Group Intercom
- Mesh Intercom Conference with Bluetooth Intercom Participant
- Universal Intercom
- VOX Intercom
- Intercom VOX Sensitivity
- HD Intercom
- Advanced Noise Control™



# 8. BLUETOOTH INTERCOM SETUP

2. Tap the **Jog Dial** on either headset and wait until the LEDs of both turn blue.

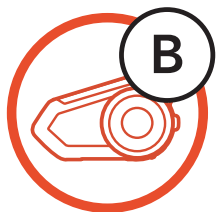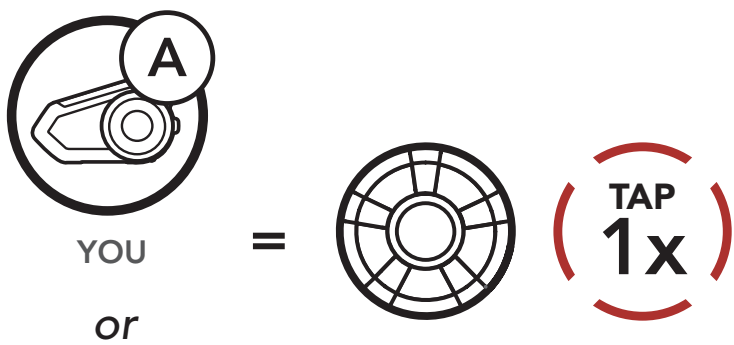


- Intercom Pairing
- Two-Way Intercom
- Multi-Way Intercom
- Three-Way Conference Phone Call with Intercom Users
- Group Intercom
- Mesh Intercom Conference with Bluetooth Intercom Participant
- Universal Intercom
- VOX Intercom
- Intercom VOX Sensitivity
- HD Intercom
- Advanced Noise Control™




## 8. BLUETOOTH INTERCOM SETUP

3. Repeat steps 1 and 2 to pair with **Intercom Friends C & D**.


### Last-Come, First-Served

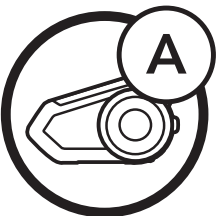


YOU

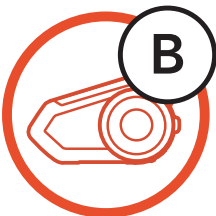


Intercom  
Friend 1

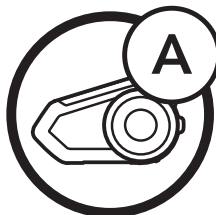


YOU

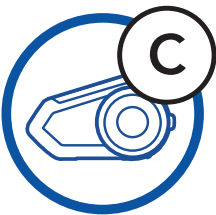


Intercom  
Friend 1

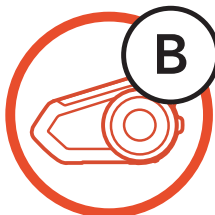


Intercom  
Friend 2

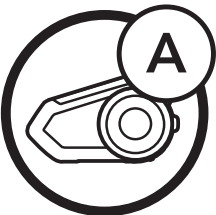


YOU

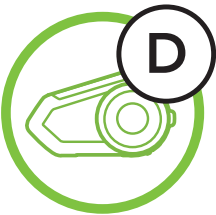

Intercom  
Friend 1

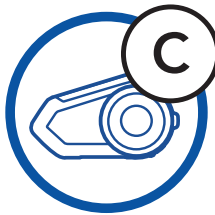

Intercom  
Friend 2

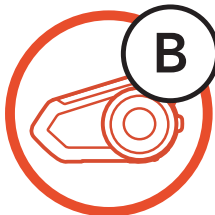

Intercom  
Friend 3

Intercom  
Pairing

Two-Way  
Intercom

Multi-Way  
Intercom

Three-Way  
Conference  
Phone Call  
with Intercom  
Users

Group  
Intercom

Mesh  
Intercom  
Conference  
with  
Bluetooth  
Intercom  
Participant

Universal  
Intercom

VOX Intercom

Intercom VOX  
Sensitivity

HD Intercom

Advanced  
Noise  
Control™




# 8. BLUETOOTH INTERCOM SETUP

## 8.2 Two-Way Intercom

You can start or end an intercom conversation with an Intercom Friend by tapping the **Jog Dial**.


- 1. Tap once for Intercom **Friend 1**.

Start/End with Intercom Friend 1

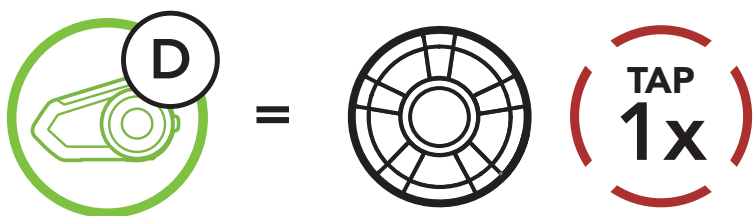


- 2. Tap twice for Intercom **Friend 2**.

Start/End with Intercom Friend 2

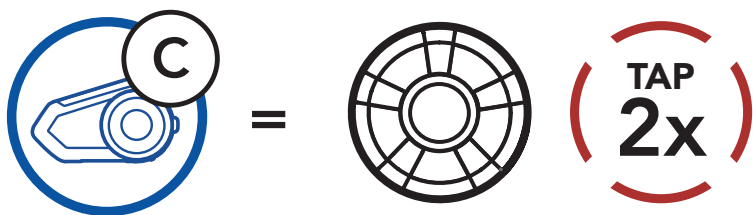

- 3. Tap three times for Intercom **Friend 3**.

Start/End with Intercom Friend 3

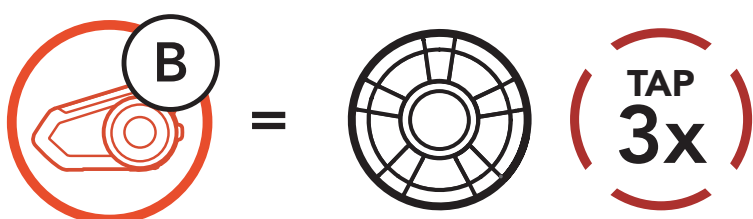

- Intercom Pairing
- Two-Way Intercom
- Multi-Way Intercom
- Three-Way Conference Phone Call with Intercom Users
- Group Intercom
- Mesh Intercom Conference with Bluetooth Intercom Participant
- Universal Intercom
- VOX Intercom
- Intercom VOX Sensitivity
- HD Intercom
- Advanced Noise Control™



## 8. BLUETOOTH INTERCOM SETUP

### 8.3 Multi-Way Intercom


**Multi-Way Intercom** enables conference-call-style conversations with up to three **Intercom Friends** at the same time. While **Multi-Way Intercom** is in progress, mobile phone connection is temporarily disconnected. However, as soon as **Multi-Way Intercom** terminates, the mobile phone connection will be reestablished.

#### 8.3.1 Starting a Three-Way Intercom Conference

**You (A)** can have a **Three-Way Intercom Conference** with two other **Intercom Friends (B & C)** by establishing two intercom connections simultaneously.

1. Pair your headset (A) with those of two other **Intercom Friends (B & C)**. Please refer to **Section 8.1: "Intercom Pairing"** for pairing instructions.

Pair with Intercom Friends B & C

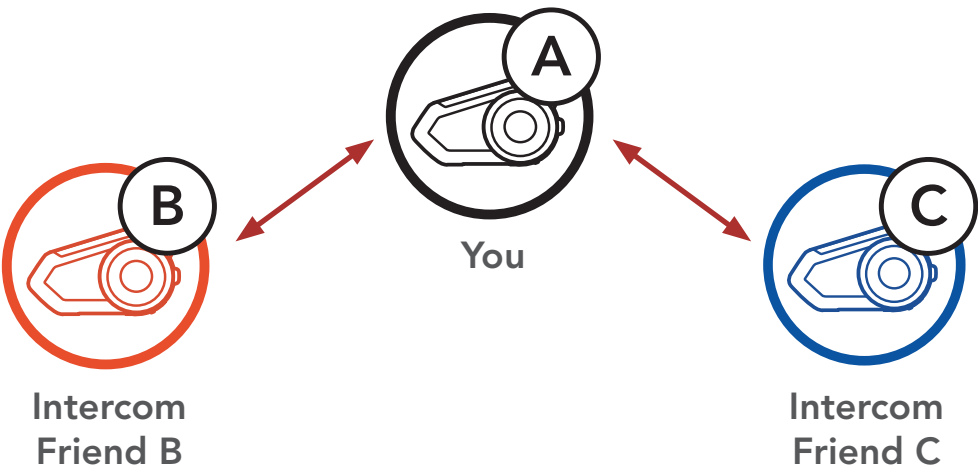

- Intercom Pairing
- Two-Way Intercom
- Multi-Way Intercom
- Three-Way Conference Phone Call with Intercom Users
- Group Intercom
- Mesh Intercom Conference with Bluetooth Intercom Participant
- Universal Intercom
- VOX Intercom
- Intercom VOX Sensitivity
- HD Intercom
- Advanced Noise Control™



## 8. BLUETOOTH INTERCOM SETUP

Intercom  
Pairing

Two-Way  
Intercom

Multi-Way  
Intercom

Three-Way  
Conference  
Phone Call  
with Intercom  
Users

Group  
Intercom

Mesh  
Intercom  
Conference  
with  
Bluetooth  
Intercom  
Participant

Universal  
Intercom

VOX Intercom


Intercom VOX  
Sensitivity

HD Intercom

Advanced  
Noise  
Control™


2. Start an intercom conversation with one of the two friends in your intercom group. For example, **you (A)** may start an intercom conversation with the **Intercom Friend (B)**. Or, **Intercom Friend (B)** may start an intercom call with **you (A)**.

### Starting an Intercom Conversation with Intercom Friend B

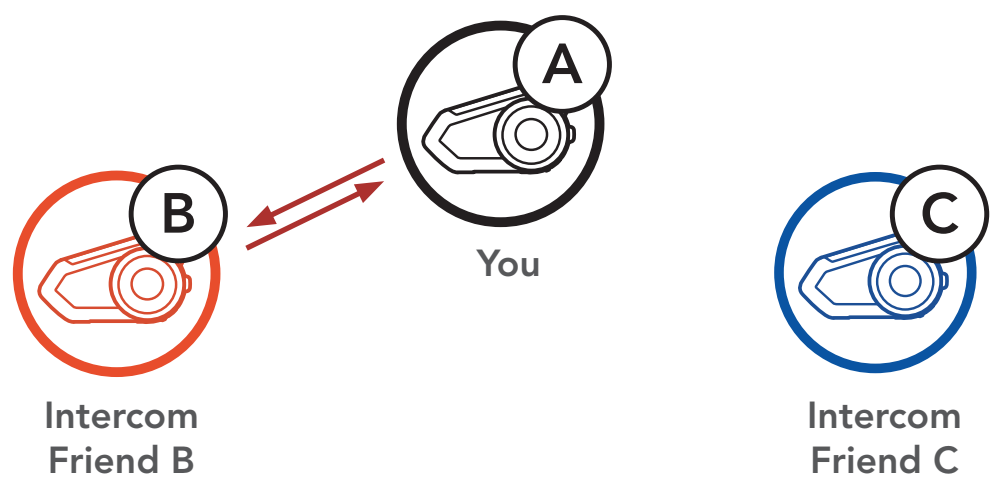

3. Then, **you (A)** can call the second **Intercom Friend (C)**, or the second **Intercom Friend (C)** may join the intercom by making an intercom call to **you (A)**.

### Starting an Intercom Conversation with Intercom Friend C

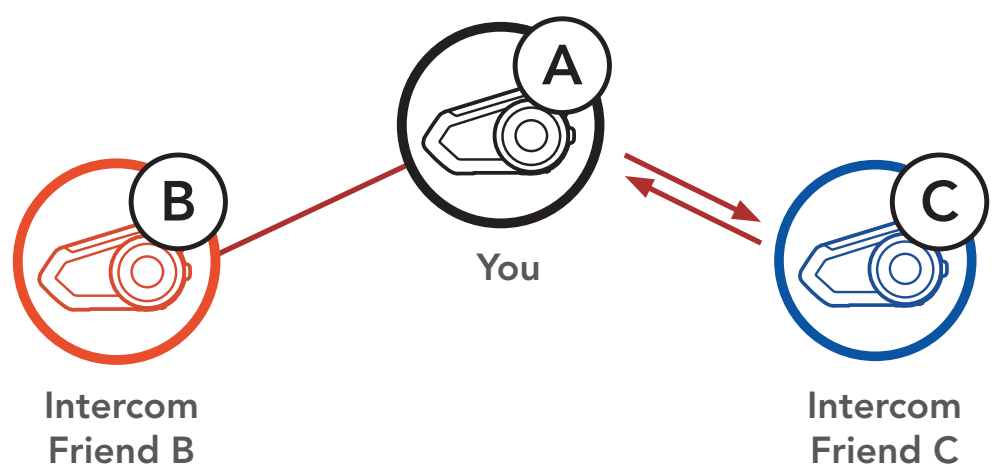




# 8. BLUETOOTH INTERCOM SETUP

4. Now **you (A)** and two **Intercom Friends (B & C)** are having a **Three-Way Intercom Conference**.


## Three-Way Intercom

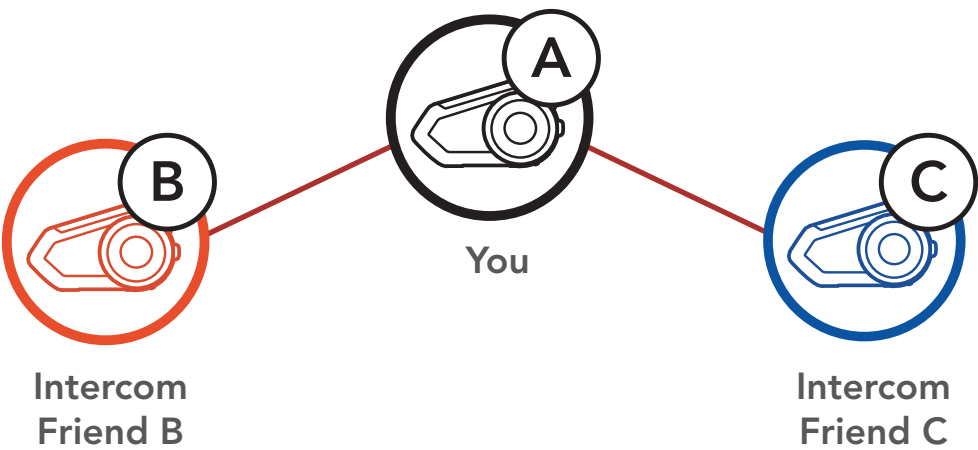

### 8.3.2 Starting a Four-Way Intercom Conference

With three **Intercom Friends** connected, a new participant **(D)** can make it a **Four-Way Intercom Conference** by making an intercom call to either **(B)** or **(C)**.

## Starting a Four-Way Intercom

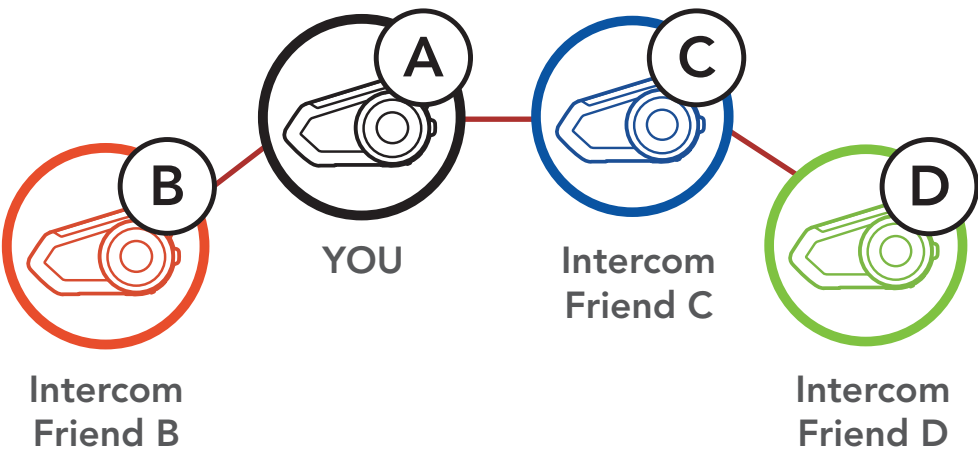

- Intercom Pairing
- Two-Way Intercom
- Multi-Way Intercom
- Three-Way Conference Phone Call with Intercom Users
- Group Intercom
- Mesh Intercom Conference with Bluetooth Intercom Participant
- Universal Intercom
- VOX Intercom
- Intercom VOX Sensitivity
- HD Intercom
- Advanced Noise Control™





## 8. BLUETOOTH INTERCOM SETUP

### 8.3.3 Ending Multi-Way Intercom


1. Press the **Jog Dial** for **1 second** until you hear a beep to terminate all intercom connections.
2. Tap the **Jog Dial** to disconnect from your first **Intercom Friend**. Double tap the **Jog Dial** to disconnect from your second **Intercom Friend**.

### 8.4 Three-Way Conference Phone Call with Intercom Users

You can have a **Three-Way Conference Phone Call** by adding an **Intercom Friend** to the mobile phone conversation.

1. During a mobile phone call, tap the **Jog Dial** **once, twice or, three times** to invite one of your **Intercom Friends** to the conversation.

#### Invite an Intercom Friend into Phone Conference

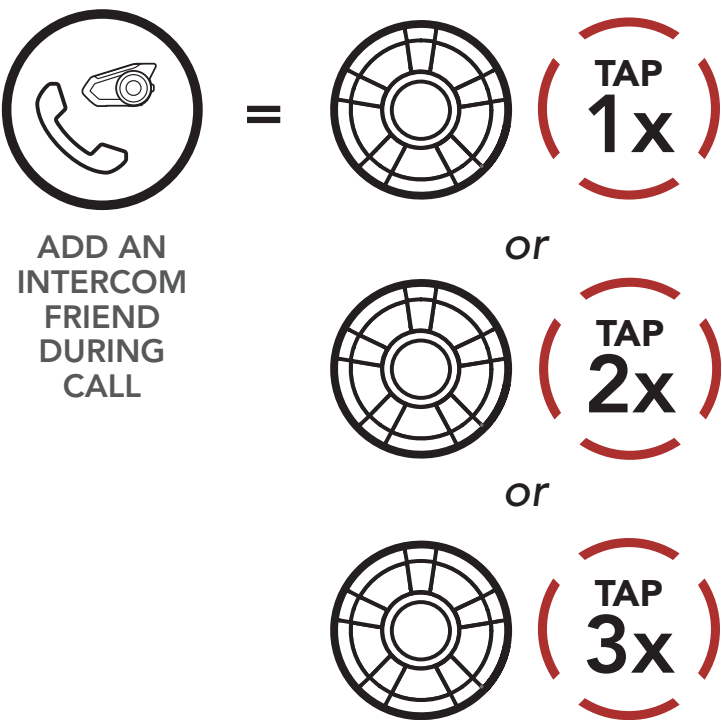

Intercom  
Pairing

Two-Way  
Intercom

Multi-Way  
Intercom

Three-Way  
Conference  
Phone Call  
with Intercom  
Users

Group  
Intercom

Mesh  
Intercom  
Conference  
with  
Bluetooth  
Intercom  
Participant

Universal  
Intercom

VOX Intercom

Intercom VOX  
Sensitivity

HD Intercom


Advanced  
Noise  
Control™



## 8. BLUETOOTH INTERCOM SETUP


2. To disconnect the intercom during a conference phone call, tap the **Jog Dial once, twice or three times**.

### Disconnect Intercom Friend from Conference

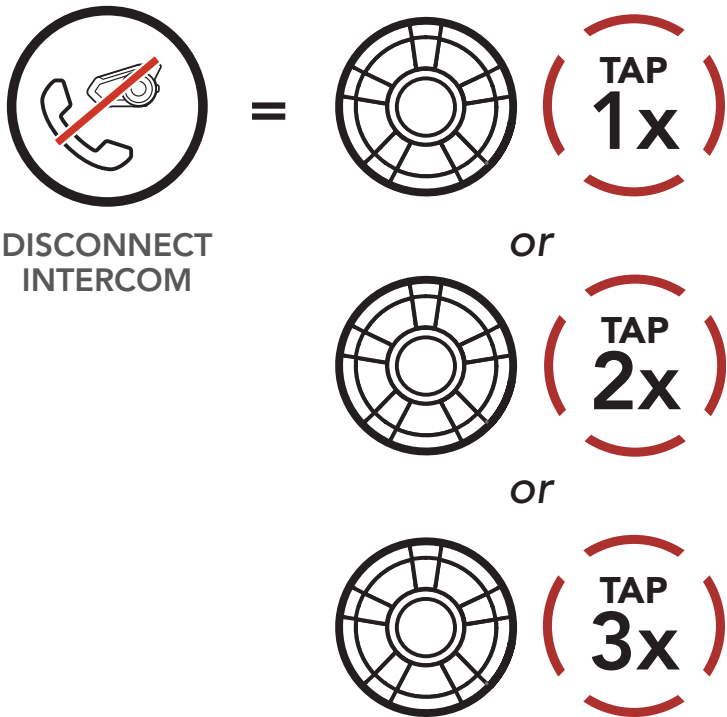

3. To disconnect the mobile phone call during a conference phone call, tap the **Phone Button**.

### End Phone Call from Conference

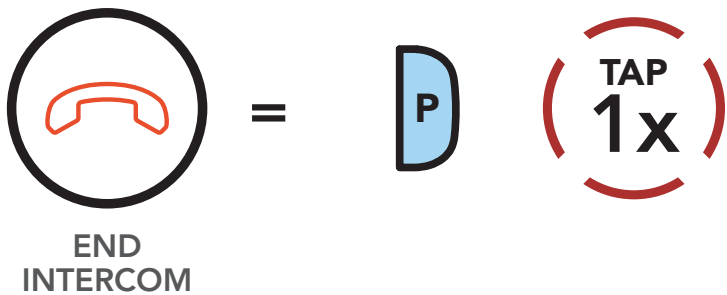

**Note:** When you have an incoming intercom call during a mobile phone call, you will hear high tone double beeps.

Intercom  
Pairing

Two-Way  
Intercom

Multi-Way  
Intercom

Three-Way  
Conference  
Phone Call  
with Intercom  
Users

Group  
Intercom

Mesh  
Intercom  
Conference  
with  
Bluetooth  
Intercom  
Participant

Universal  
Intercom

VOX Intercom

Intercom VOX  
Sensitivity

HD Intercom

Advanced  
Noise  
Control™




## 8. BLUETOOTH INTERCOM SETUP

### 8.5 Group Intercom

**Group Intercom** allows you to instantly create a **Multi-Way Conference Intercom** with three of the most recently paired headsets.

- 1. Go through intercom pairing with up to three headsets you want to have **Group Intercom** with.
- 2. Press the **Ambient Mode Button** for **1 second** to begin **Group Intercom**. The LED will flash green and you will hear a voice prompt, "**Group intercom**".

#### Start Group Intercom

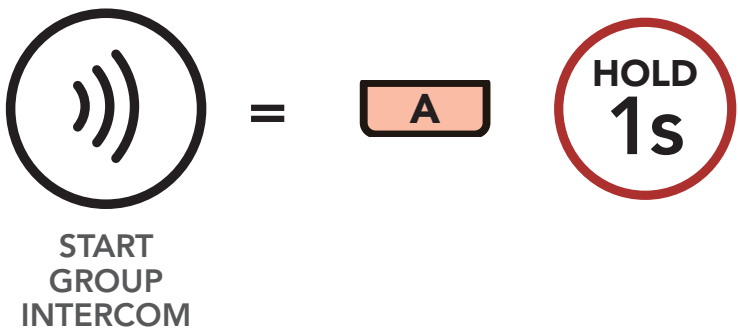

"Group intercom"

- 3. When all of the headsets are connected together, everyone will hear the voice prompt, "**Group intercom connected.**"



"Group intercom connected"



BLUETOOTH  
LED STATUS

= Green LED Flashing



- Intercom Pairing
- Two-Way Intercom
- Multi-Way Intercom
- Three-Way Conference Phone Call with Intercom Users
- Group Intercom
- Mesh Intercom Conference with Bluetooth Intercom Participant
- Universal Intercom
- VOX Intercom
- Intercom VOX Sensitivity
- HD Intercom
- Advanced Noise Control™



## 8. BLUETOOTH INTERCOM SETUP

4. To terminate **Group Intercom**, press the **Ambient Mode Button** for **1 second** during **Group Intercom**. You will hear a voice prompt, "**Group intercom terminated**".

### End Group Intercom

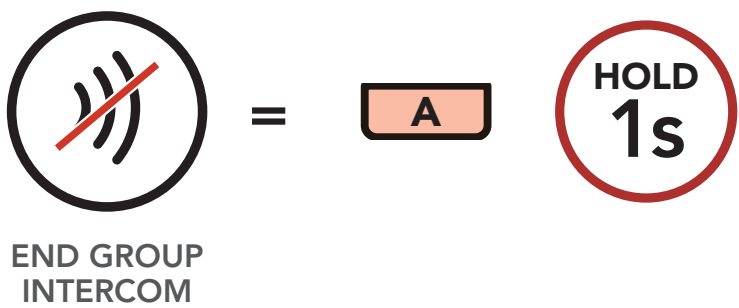

"Group intercom terminated"

### 8.6 Mesh Intercom Conference with Bluetooth Intercom Participant

Users can use the existing Bluetooth intercom and **Mesh Intercom** function at the same time. In this case, it is recommended to communicate with other Sena headsets via Bluetooth intercom connection and use **Mesh Intercom** between 30K headsets. A user who is in **Open Mesh** or **Group Mesh** when using **Mesh Intercom** is able to include up to 3 of their Bluetooth intercom friends. You can start a Two-Way Intercom conversation with one of your three Intercom Friends to include them in the Mesh. Please refer to **Section 8.2: "Two-Way Intercom"** for more details. Or, you can use "Group Intercom" to include all of your Bluetooth intercom friends in the Mesh. Please refer to **Section 8.5: "Group Intercom"** for more details.

Intercom  
Pairing

Two-Way  
Intercom

Multi-Way  
Intercom

Three-Way  
Conference  
Phone Call  
with Intercom  
Users

Group  
Intercom

Mesh  
Intercom  
Conference  
with  
Bluetooth  
Intercom  
Participant

Universal  
Intercom

VOX Intercom

Intercom VOX  
Sensitivity

HD Intercom


Advanced  
Noise  
Control™



## 8. BLUETOOTH INTERCOM SETUP

**Note:**

- The audio quality will be reduced if a **30K** connects to 2 or more Bluetooth intercom friends while in **Open Mesh** or **Group Mesh** when using **Mesh Intercom**.
- If a closed loop is created, as shown below, each user will experience severe noise issues. Sena recommends that a closed loop not be created.

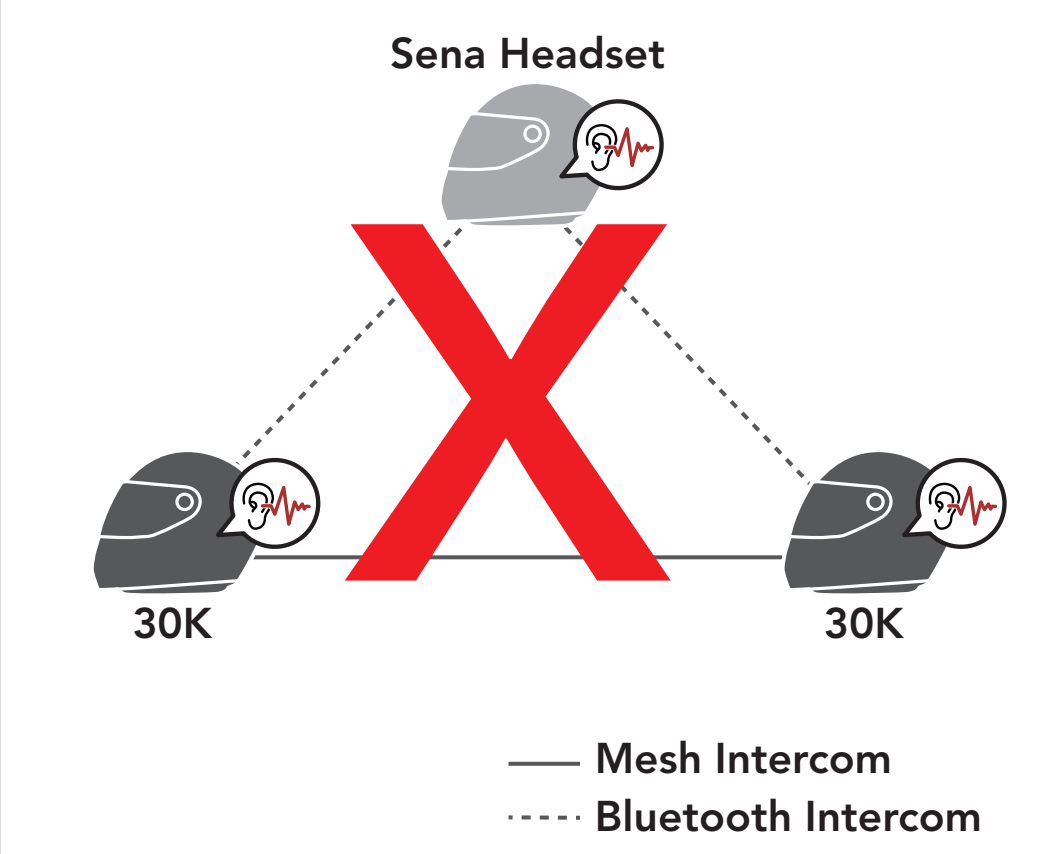

Intercom  
Pairing

Two-Way  
Intercom

Multi-Way  
Intercom

Three-Way  
Conference  
Phone Call  
with Intercom  
Users

Group  
Intercom

Mesh  
Intercom  
Conference  
with  
Bluetooth  
Intercom  
Participant

Universal  
Intercom

VOX Intercom

Intercom VOX  
Sensitivity

HD Intercom

Advanced  
Noise  
Control™



## 8. BLUETOOTH INTERCOM SETUP

Intercom  
Pairing

Two-Way  
Intercom

Multi-Way  
Intercom

Three-Way  
Conference  
Phone Call  
with Intercom  
Users

Group  
Intercom

Mesh  
Intercom  
Conference  
with  
Bluetooth  
Intercom  
Participant

Universal  
Intercom


VOX Intercom

Intercom VOX  
Sensitivity

HD Intercom

Advanced  
Noise  
Control™

- If **Bluetooth intercom** is accidentally turned on during **Mesh Intercom** communication between **30K** headsets, as shown below, you will hear a voice prompt, "**Mesh intercom disabled, Bluetooth intercom connected**" every **1 minute**. If you turn off the Bluetooth Intercom or turn off the **Mesh Intercom**, the voice prompt will no longer come out.

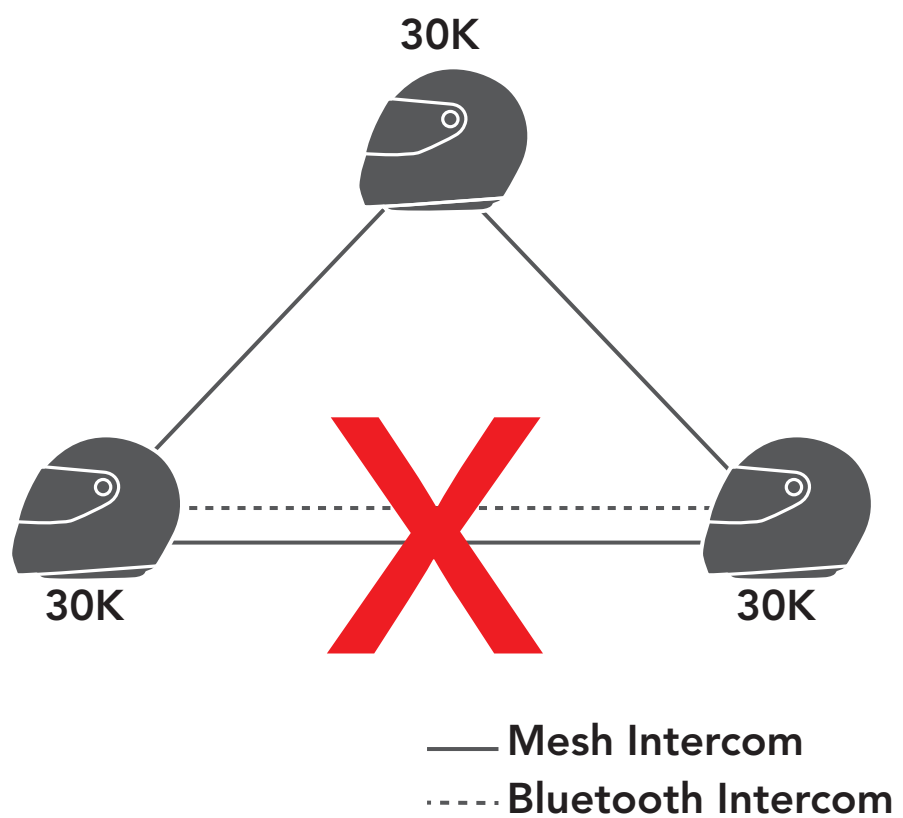

### 8.7 Universal Intercom

**Universal Intercom** allows you to have intercom conversations with users of non-Sena Bluetooth headsets. You can pair your headset with only one non-Sena headset at a time. The intercom distance depends on the performance of the Bluetooth headset to which it's connected. When a non-Sena Bluetooth headset is paired with the Sena headset, if another Bluetooth device is paired via **Second Mobile Phone Pairing**, it will be disconnected.

1. Execute **Universal Intercom** in the **Headset Configuration Menu**.



# 8. BLUETOOTH INTERCOM SETUP

Access Universal Intercom in the Configuration Menu

Intercom Pairing

Two-Way Intercom

Multi-Way Intercom

Three-Way Conference Phone Call with Intercom Users

Group Intercom

Mesh Intercom Conference with Bluetooth Intercom Participant



Universal Intercom

VOX Intercom



Intercom VOX Sensitivity

HD Intercom


Advanced Noise Control™

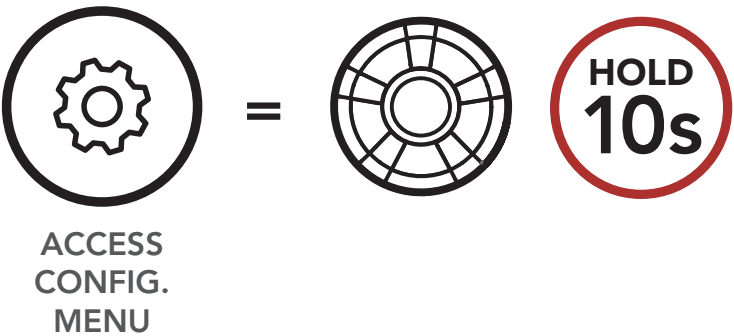

"Configuration menu"

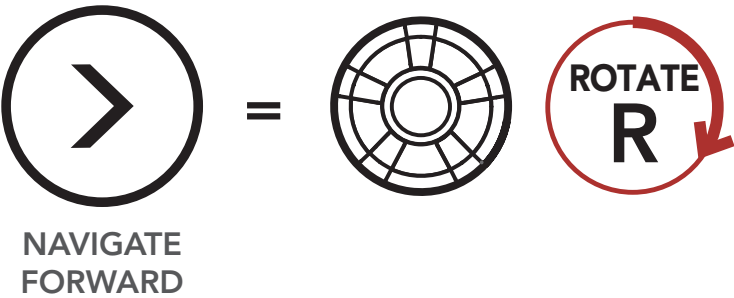

"Universal intercom pairing"

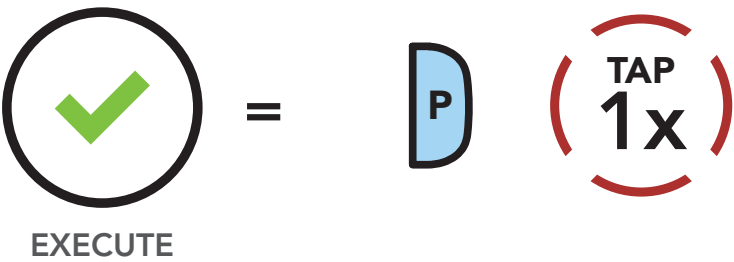

2. Put the non-Sena Bluetooth headset in Pairing Mode. The headset will automatically pair with a non-Sena Bluetooth headset.







# 8. BLUETOOTH INTERCOM SETUP

3. You can have **Two-Way Intercom** or **Multi-Way Intercom** communication with up to three **Intercom Friends** using non-Sena headsets by following the procedures described below.

## Example of a Three-Way Universal Intercom

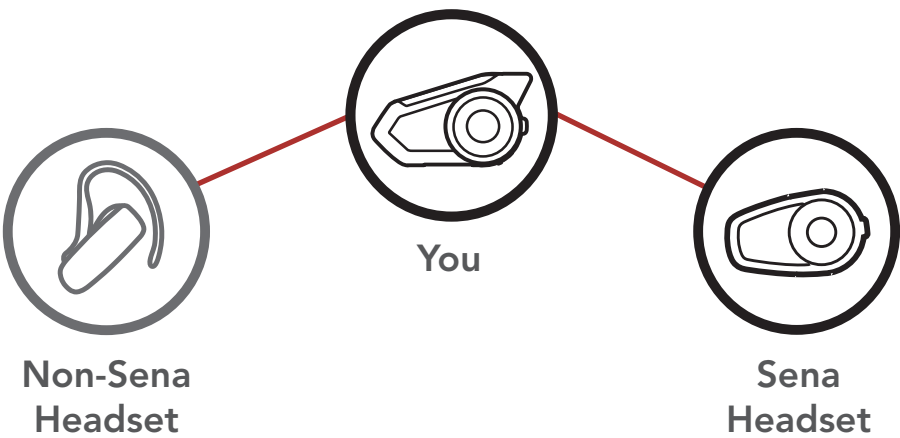

## Example of a Four-Way Universal Intercom

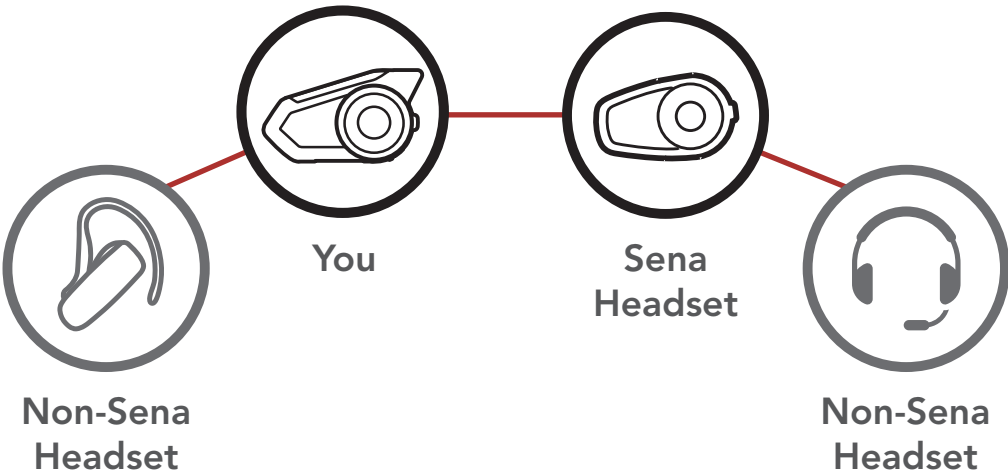

Intercom  
Pairing

Two-Way  
Intercom

Multi-Way  
Intercom

Three-Way  
Conference  
Phone Call  
with Intercom  
Users

Group  
Intercom

Mesh  
Intercom  
Conference  
with  
Bluetooth  
Intercom  
Participant

Universal  
Intercom

VOX Intercom

Intercom VOX  
Sensitivity

HD Intercom

Advanced  
Noise  
Control™





## 8. BLUETOOTH INTERCOM SETUP

### 8.8 VOX Intercom (Default: Disable)

The **VOX Intercom** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

If **VOX Intercom** is enabled, you can initiate an intercom conversation with the last connected intercom friend by voice. When you want to start intercom, say a word such as **"Hello"** loudly or blow air into the microphone. If you start an intercom conversation by voice, the intercom terminates automatically when you and your intercom friend remain silent for 20 seconds. However, if you manually start an intercom conversation by tapping the **Jog Dial**, you have to terminate the intercom conversation manually.

However, if you start the intercom by voice and end it manually by tapping the **Jog Dial**, you will not be able to start intercom by voice temporarily. In this case, you have to tap the **Jog Dial** to restart the intercom. This is to prevent repeated unintentional intercom connections by strong wind noise. After rebooting the headset, you can start the intercom by voice again.

- Intercom Pairing
- Two-Way Intercom
- Multi-Way Intercom
- Three-Way Conference Phone Call with Intercom Users
- Group Intercom
- Mesh Intercom Conference with Bluetooth Intercom Participant
- Universal Intercom
- VOX Intercom
- Intercom VOX Sensitivity
- HD Intercom
- Advanced Noise Control™



## 8. BLUETOOTH INTERCOM SETUP

### 8.9 Intercom VOX Sensitivity (Default: 3)

The **Intercom VOX Sensitivity** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

The sensitivity can be adjusted depending on your riding environment. Level 5 is the highest sensitivity setting and 1 is the lowest.

### 8.10 HD Intercom (Default: Enable)

The **HD Intercom** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

**HD Intercom** enhances the two-way intercom audio from normal quality to HD quality. **HD Intercom** will become temporarily disabled when you enter into a multi-way intercom. If this feature is disabled, the two-way intercom audio will change to normal quality.

**Note:** The intercom distance of **HD Intercom** is relatively shorter than that of normal intercom.

### 8.11 Advanced Noise Control™ (Default: Enable)

The **Advanced Noise Control** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

If **Advanced Noise Control** is enabled, background noise is reduced during intercom conversations.

If **Advanced Noise Control** is disabled, the background noise is mixed with your voice while using the intercom.

- Intercom Pairing
- Two-Way Intercom
- Multi-Way Intercom
- Three-Way Conference Phone Call with Intercom Users
- Group Intercom
- Mesh Intercom Conference with Bluetooth Intercom Participant
- Universal Intercom
- VOX Intercom
- Intercom VOX Sensitivity
- HD Intercom
- Advanced Noise Control™



## Audio Multitasking Settings

## Intercom-Audio Overlay Sensitivity

## Audio Overlay Volume Management

# 9. AUDIO MULTITASKING

Audio Multitasking allows you to have an intercom conversation while simultaneously listening to music, FM radio, or GPS instructions. The overlaid audio is played in the background with reduced volume whenever there is an intercom conversation and will return to normal volume once the conversation is finished. The Audio Multitasking feature can be configured through the **Intercom-Audio Overlay Sensitivity** and the **Audio Overlay Volume Management** settings.

## 9.1 Audio Multitasking Settings

The Mesh Intercom Audio Multitasking feature is always on. The **Bluetooth Intercom Audio Multitasking (Default: Disabled)** setting can be found in the settings menu, accessible through the **Sena Device Manager** or the **Sena 30K Utility App**.

### Note:

1. **Bluetooth Intercom Audio Multitasking** will be activated during two-way intercom conversations with a headset that also supports this feature.
2. HD Intercom will become disabled temporarily when **Bluetooth Intercom Audio Multitasking** is enabled.
3. For **Bluetooth Intercom Audio Multitasking** to work properly, you need to power the headset off and on. Please restart the headset.
4. Some GPS devices may not support this feature.



## 9. AUDIO MULTITASKING

### 9.2 Intercom-Audio Overlay Sensitivity (Default: 3)

The **Intercom-Audio Overlay Sensitivity** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**. The music, FM radio and GPS volume will be lowered to play in the background if you talk over the intercom while the overlaid audio is playing. You can adjust the intercom sensitivity to activate this background audio mode. Level 1 has the lowest sensitivity and level 5 has the highest sensitivity.

**Note:** If your voice is not louder than the sensitivity of the selected level, the overlaid audio will not be lowered.

### 9.3 Audio Overlay Volume Management (Default: Disable)

The **Audio Overlay Volume Management** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**. The music, FM radio and GPS overlaid audio reduces in volume whenever there is an ongoing intercom conversation. If **Audio Overlay Volume Management** is enabled, the volume level of the overlaid audio will not be reduced during intercom conversation.

Audio  
Multitasking  
Settings

Intercom-  
Audio Overlay  
Sensitivity

Audio Overlay  
Volume  
Management




# 10. USING THE FM RADIO

## 10.1 FM Radio On/Off

To turn on or shut off the FM radio, press the **Phone Button** for **1 second** until you hear a double beep.


### FM Radio On

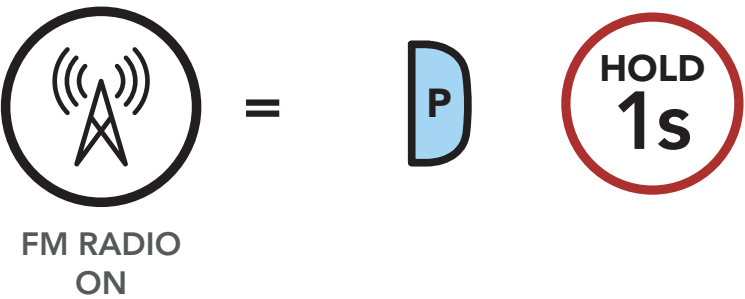

FM RADIO  
ON



### FM Radio Off

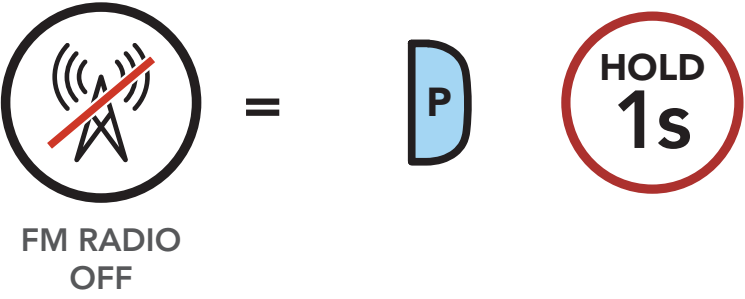

FM RADIO  
OFF



FM Radio  
On/Off

Seek and  
Save Radio  
Stations

Scan and  
Save Radio  
Stations

Temporary  
Station Preset

Navigating  
Preset  
Stations

Region  
Selection

Radio Data  
System (RDS)  
Alternative  
Frequency  
(AF) Setting

FM Station  
Guide




# 10. USING THE FM RADIO

## 10.2 Seek and Save Radio Stations


The **"Seek"** feature searches for radio stations.

- 1. Rotate while pressing the **Jog Dial** clockwise or counterclockwise to search for radio stations.

### Seek Stations Forward


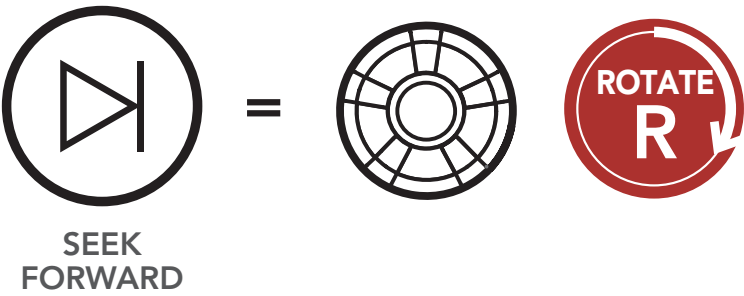


### Seek Stations Backward

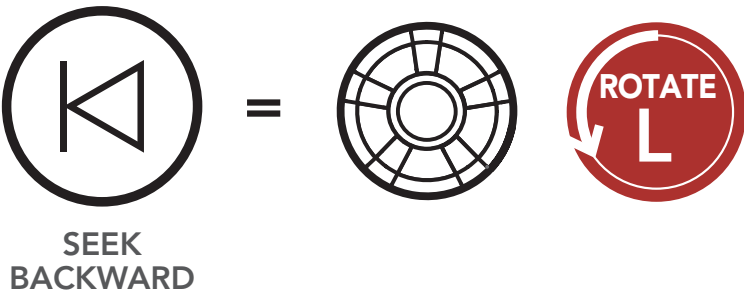

- 2. To save the current station, press and hold the **Jog Dial** for **1 seconds** until you hear the voice prompt, **"Preset (#)."**

### Enter Preset Selection Mode

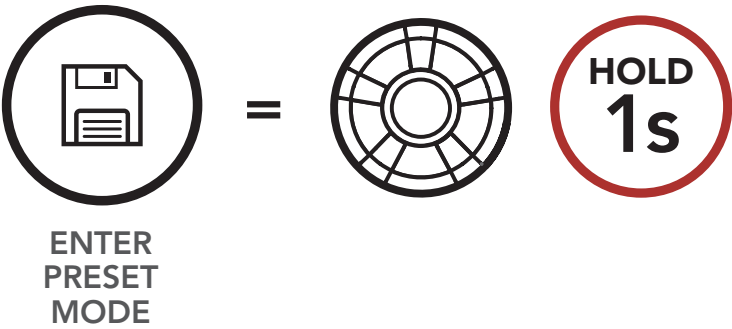

"Preset (#)"

FM Radio  
On/Off

Seek and  
Save Radio  
Stations

Scan and  
Save Radio  
Stations

Temporary  
Station Preset

Navigating  
Preset  
Stations

Region  
Selection

Radio Data  
System (RDS)  
Alternative  
Frequency  
(AF) Setting


FM Station  
Guide




# 10. USING THE FM RADIO

3. Rotate the **Jog Dial** to navigate through the preset numbers that you want to store.

## Navigate Forward through Preset Stations

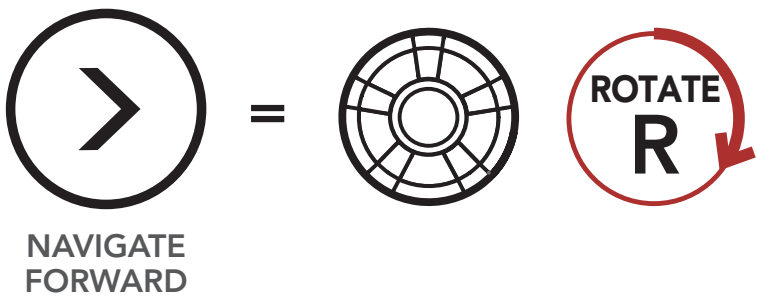


## Navigate Backward through Preset Stations

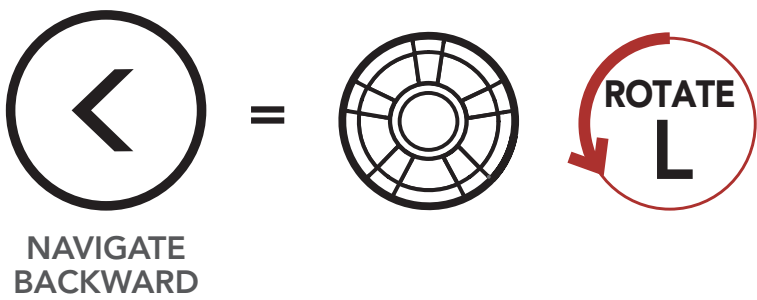


4. Tap the **Jog Dial** to save the station in the preset number you choose. Or, tap the **Phone Button** to delete the station from memory.

## Save Station to the Preset Number

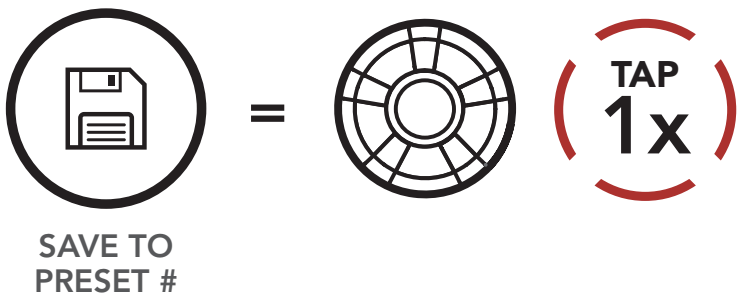

## Delete Station from Memory

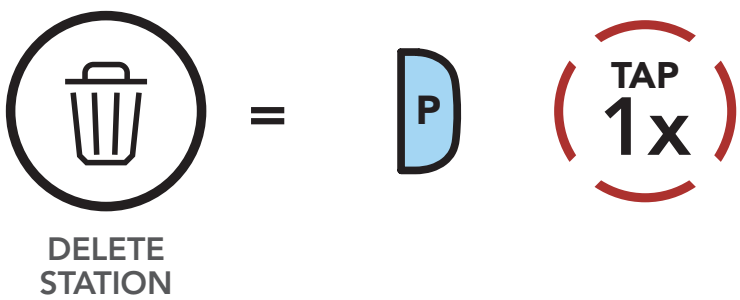

FM Radio  
On/Off

Seek and  
Save Radio  
Stations

Scan and  
Save Radio  
Stations

Temporary  
Station Preset

Navigating  
Preset  
Stations

Region  
Selection

Radio Data  
System (RDS)  
Alternative  
Frequency  
(AF) Setting

FM Station  
Guide






# 10. USING THE FM RADIO

## 10.3 Scan and Save Radio Stations

The **"Scan"** function automatically searches for radio stations, starting with the current station's frequency, then up from there.



- 1. Double tap the **Phone Button** to scan for stations.

### Scan and Save Radio Stations

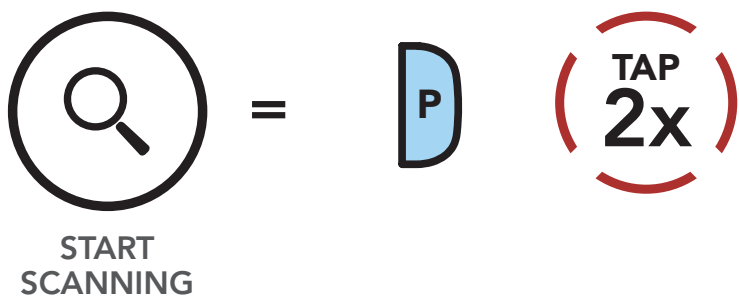

- 2. The Sena tuner pauses at each station it finds for **8 seconds** before moving to the next.
- 3. To save the current station, tap the **Phone Button**. The station will be saved as the next preset number.

### Save the Current Station

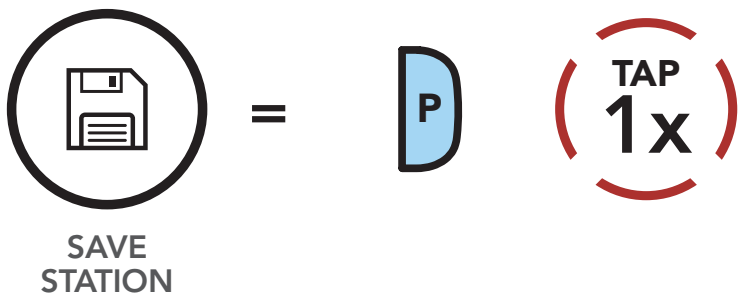

"Save preset (#)"

FM Radio  
On/Off

Seek and  
Save Radio  
Stations

Scan and  
Save Radio  
Stations

Temporary  
Station Preset

Navigating  
Preset  
Stations

Region  
Selection

Radio Data  
System (RDS)  
Alternative  
Frequency  
(AF) Setting

FM Station  
Guide






# 10. USING THE FM RADIO

4. To stop scanning, double tap the **Phone Button**.

## Stop Scanning

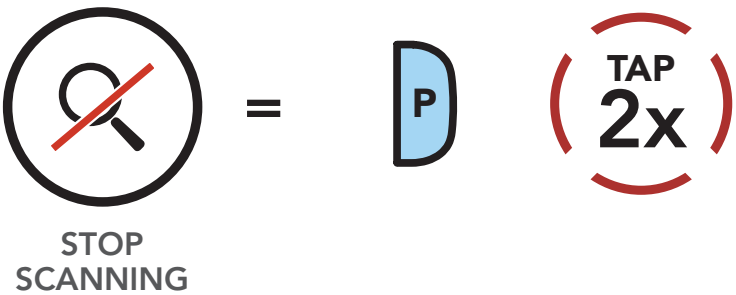


STOP  
SCANNING

## 10.4 Temporary Station Preset

The **Temporary Preset** feature automatically finds and saves the nearest 10 radio stations without changing your existing preset stations.

1. Tap the **Phone Button** three times to automatically find and save 10 stations.

## Temporary Stations

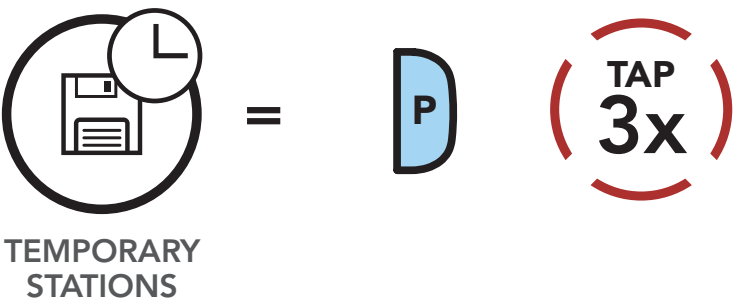

TEMPORARY  
STATIONS

2. The temporary preset stations will be cleared when the headset reboots.

FM Radio  
On/Off

Seek and  
Save Radio  
Stations

Scan and  
Save Radio  
Stations

Temporary  
Station Preset

Navigating  
Preset  
Stations

Region  
Selection

Radio Data  
System (RDS)  
Alternative  
Frequency  
(AF) Setting

FM Station  
Guide




# 10. USING THE FM RADIO

## 10.5 Navigating Preset Stations

Using the methods above, up to 10 radio stations can be stored. Tap the **Phone Button** to navigate through the saved stations.

### Navigate through Preset Stations

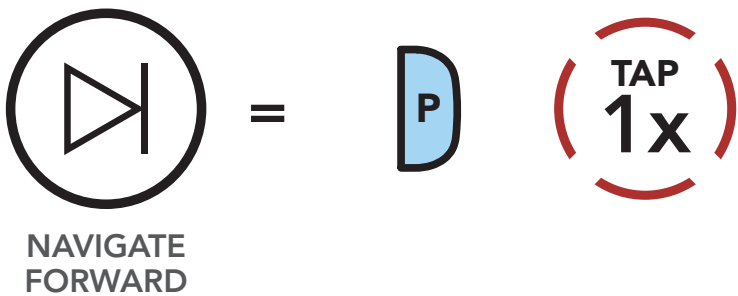

**Note:** You can use the **Sena Device Manager** or the **Sena 30K Utility App** to save the preset stations.

## 10.6 Region Selection

You can select the proper FM frequency range for your location from the **Sena Device Manager** or the **Sena 30K Utility App**. Using the region setting, you can optimize the seek function to avoid unnecessary frequency ranges.

Region	Frequency range	Step
Worldwide	76.0 ~ 108.0 MHz	± 100 kHz
North America, South America and Australia	87.5 ~ 107.9 MHz	± 200 kHz
Asia and Europe	87.5 ~ 108.0 MHz	± 100 kHz
Japan	76.0 ~ 95.0 MHz	± 100 kHz

FM Radio  
On/Off

Seek and  
Save Radio  
Stations

Scan and  
Save Radio  
Stations

Temporary  
Station Preset

Navigating  
Preset  
Stations

Region  
Selection

Radio Data  
System (RDS)  
Alternative  
Frequency  
(AF) Setting

FM Station  
Guide



# 10. USING THE FM RADIO

## 10.7 Radio Data System (RDS) Alternative Frequency (AF) Setting (Default: Disable)

FM Radio On/Off

Seek and Save Radio Stations

Scan and Save Radio Stations

Temporary Station Preset

Navigating Preset Stations

Region Selection

Radio Data System (RDS) Alternative Frequency (AF) Setting

FM Station Guide

The **RDS AF** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

When radio station signals get too weak for a good reception, with **RDS AF** enabled, the Sena radio receiver re-tunes to a station with better reception. If **RDS AF** is disabled, you'll have to find stronger stations manually.

## 10.8 FM Station Guide (Default: Enable)

The **Station Guide** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.


When **FM Station Guide** is enabled, FM station frequencies are given by voice prompts as you select preset stations. When **FM Station Guide** is disabled, the voice prompts on FM station frequencies will not be given as you select preset stations.



# 11. AMBIENT MODE

You can hear the ambient sound outside of your helmet by activating the **Ambient Mode**. To activate the **Ambient Mode**, press the **Ambient Mode Button** twice which is placed on the bottom of the clamp unit. To deactivate the **Ambient Mode**, press the **Ambient Mode Button** twice again.

## Ambient Mode

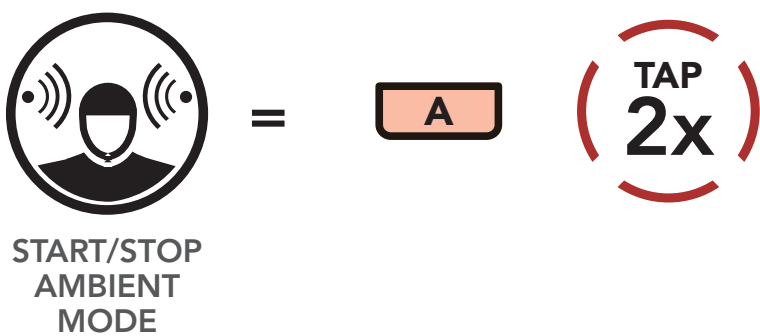

**Note:** The **Ambient Mode** has higher priority than mobile phone, so you cannot listen to music, or have an intercom conversation if the **Ambient Mode** is activated.




Voice  
Command  
Setting

## 12. VOICE COMMAND

The voice command of the headset allows you to operate certain operations by simply using your voice. You can control the headset completely handsfree using the voice recognition. The voice command function works only with English commands.

Voice Command

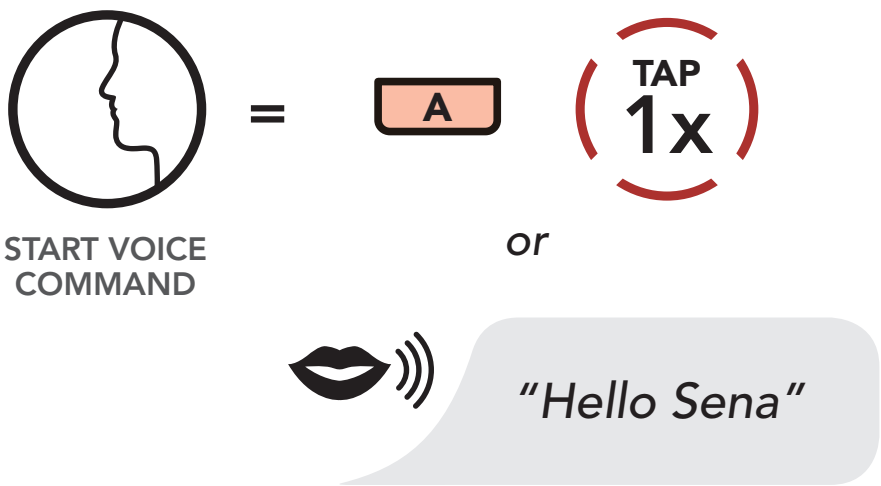

Speak a voice command from the table below:

Mode Status	Function	Voice Command
Standby / Intercom	Start/End each Intercom	"Intercom [one, two, three]"
	End all intercoms	"End intercom"
	Call last intercom	"Last intercom"
	Group intercom	"Group intercom"
	Intercom pairing	"Pairing intercom"
	Cancelling operations	"Cancel"



## 12. VOICE COMMAND

Voice  
Command  
Setting

Mode Status	Function	Voice Command
Standby / Music / FM Radio	Play/Pause music	"Music" or "Stereo"
	Turn on/off FM radio	"FM radio"
	Check battery	"Check battery"
	Speed dialing	"Speed dial [one, two, three]"
	Redial the last call	"Redial"
	Check connected devices	"Connected devices"
	Configuration menus	"Configuration"
Music / FM Radio	Next track (music) / next preset (FM radio)	"Next"
	Previous track (music) / previous preset (FM radio)	"Previous"
	Stop music / FM radio	"Stop"
Standby / Mesh Intercom	Mesh intercom On/Off	"Mesh intercom"
	End the Bluetooth and Mesh intercom	"End intercom"



## Voice Command Setting

# 12. VOICE COMMAND

### Note:

- Voice command performance may vary based on the environmental conditions including riding speed, helmet type and ambient noise. To improve the performance, minimize wind noise on the microphone by using a large microphone sponge and closing the visor.
- To activate the voice command during intercom conversation, tap the **Ambient Mode Button** once.

## 12.1 Voice Command Setting (Default: Enable)

A **Voice Command** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

When **Voice Command** is enabled, you can use your voice to give a command the headset operate certain operations completely handsfree. If **Voice Command** is disabled, you will need to operate all of the functions using the buttons on the headset.



# 13. GENERAL SETTINGS

## 13.1 Function Priority

### Function Priority

The headset prioritizes connected devices in the following order:

### Firmware Upgrades

(highest)

Ambient Mode

Mobile phone

### Voice Prompts

Voice command mode

Mesh Intercom / Bluetooth Intercom

### Sidetone

Music sharing via Bluetooth stereo

FM radio

### Delete All Bluetooth Pairing Information

Stereo music by audio cable

(lowest)

Bluetooth stereo music

A lower-priority function gets interrupted by a higher-priority function. For example, stereo music will be interrupted by an **Intercom Conversation**; an **Intercom Conversation** will be interrupted by an incoming mobile phone call.

## 13.2 Firmware Upgrades

The headset supports firmware upgrades. You can upgrade the firmware using the **Sena Device Manager**. Please visit **sena.com** to check for the latest software downloads.

[Click Here to Visit sena.com](#)





# 13. GENERAL SETTINGS

## 13.3 Voice Prompts (Default: Enable)

Function  
Priority

Firmware  
Upgrades

Voice  
Prompts

Sidetone

Delete All  
Bluetooth  
Pairing  
Information

A **Voice prompt** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

If **Voice prompt** is enabled, you can hear **Voice prompts** for different kinds of features. If **Voice prompt** is disabled, **Voice prompts** are silenced except for those in the Configuration Menu, battery level indication, speed dial, and FM radio functions.

## 13.4 Sidetone (Default: Disable)

A **Sidetone** setting can be found in the settings menu, accessible through **Sena Device Manager** or **Sena 30K Utility App**.

**Sidetone** is the sound of your own voice as picked up by your headset’s microphone and reproduced in your own ear, by your own speaker. It helps you to naturally speak at the correct level according to varying helmet noise conditions. If this feature is enabled, you can hear what you are speaking during an intercom conversation or a phone call.



# 13. GENERAL SETTINGS

## 13.5 Delete All Bluetooth Pairing Information

Function  
Priority

Firmware  
Upgrades

Voice  
Prompts



Sidetone

Delete All  
Bluetooth  
Pairing  
Information



A **Delete All Bluetooth Pairing Information** setting can be found in the **Headset Configuration Menu**.

Tap the **Phone Button** when in this menu to **Delete All Bluetooth Pairing Information** stored in the headset.


Access Delete All Pairings in the Configuration Menu

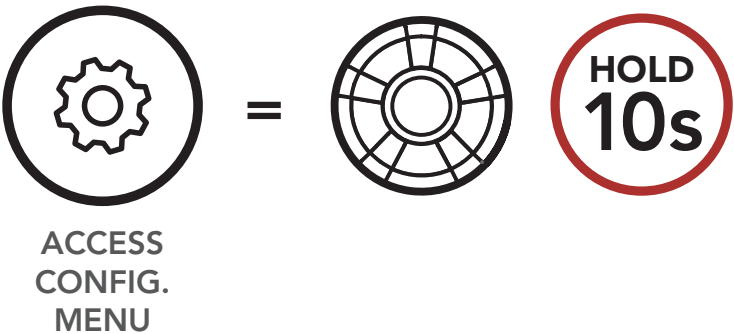

"Configuration menu"

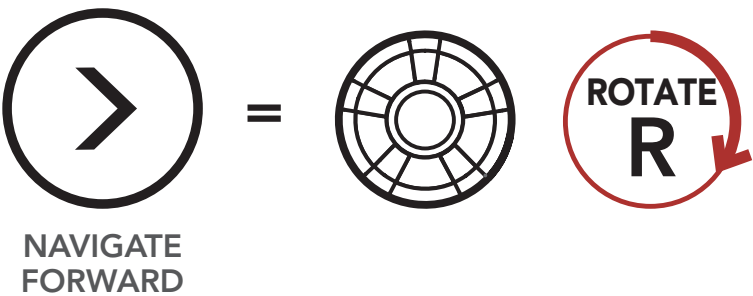

"Delete all pairings"

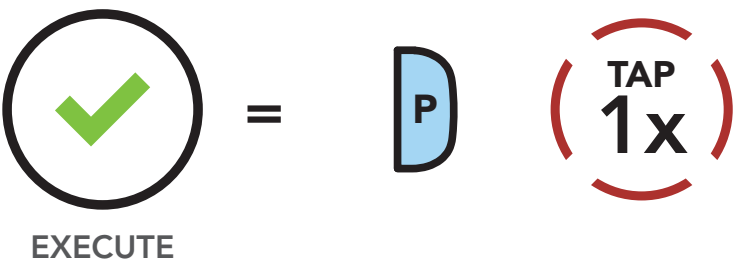



## Pairing with the Remote Control


# 14. REMOTE CONTROL

You can remotely control the headset using Sena Remote Control devices (sold separately) such as a Handlebar Remote or a Wristband Remote. This eliminates the need to remove your hands from the handlebars for button operations.


## 14.1 Pairing with the Remote Control

1. Turn on the headset and the Remote Control device.
2. Execute **Remote Control Pairing** in the **Headset Configuration Menu**.


Access Remote Control Pairing in the Configuration Menu

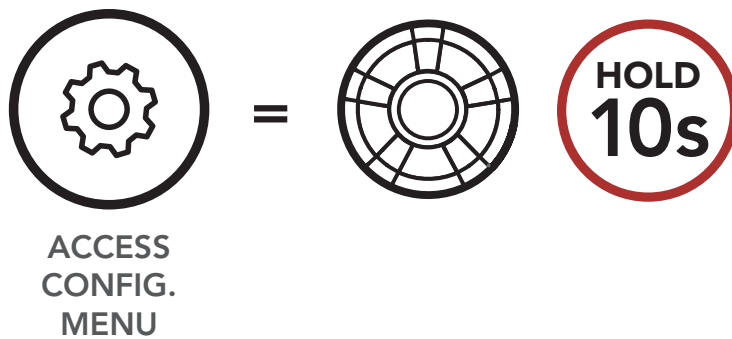

*"Configuration menu"*

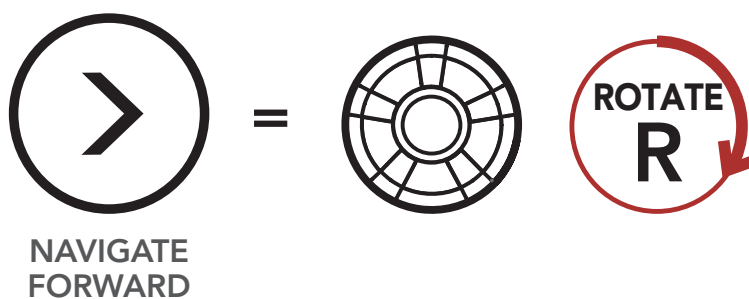

*"Remote control pairing"*

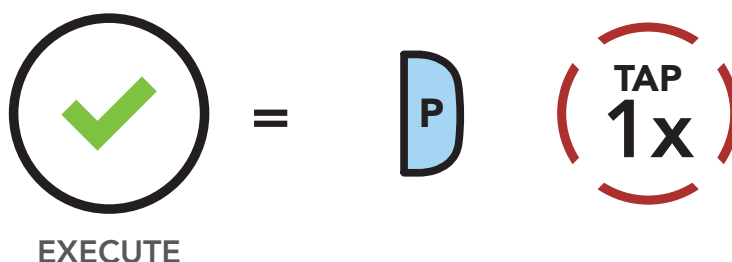



Pairing with  
the Remote  
Control

# 14. REMOTE CONTROL

3. Enter pairing mode in the Remote Control device. The headset will automatically connect with the Remote Control device in pairing mode. You will hear a voice prompt, **“Remote control connected”**, when they are successfully paired.

Enter Pairing Mode



=

Enter Pairing Mode  
on Remote Control.

REMOTE  
CONTROL



*“Remote control connected”*



## 15. TROUBLESHOOTING

Please visit **sena.com** for answers to frequently asked questions. This detailed online FAQ section deals with troubleshooting, illustrates case studies and contains tips on using the headset.

**Fault Reset**


**Factory Reset**

[Click Here to Visit sena.com](https://sena.com)

### 15.1 Fault Reset

When the headset is not working properly, you can easily reset the unit:

1. Locate the pinhole reset button below on the back of the main unit.
2. Gently insert a paperclip into the hole and tap the **Fault Reset Button** with light pressure.

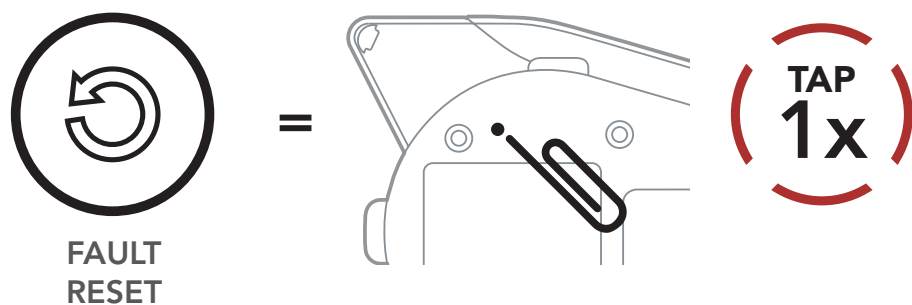

3. The headset will shut down.

**Note:** Fault Reset will not restore the headset to factory default settings.





# 15. TROUBLESHOOTING

## 15.2 Factory Reset




Fault Reset

Factory Reset

To erase all of your settings and start fresh, the headset can be restored to factory default settings using the **Factory Reset** feature.

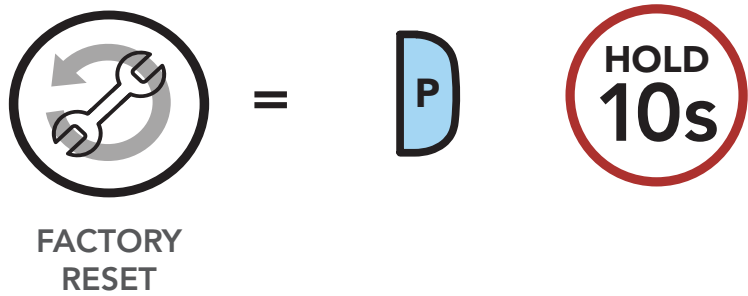

*"Factory Reset"*

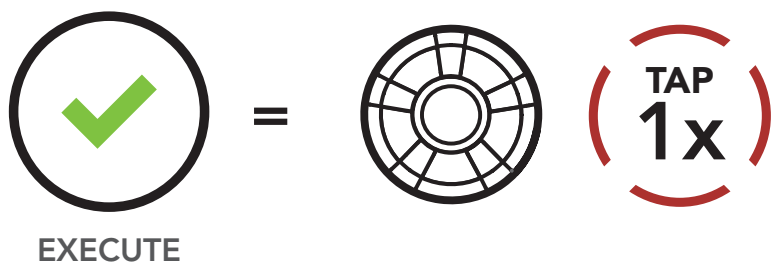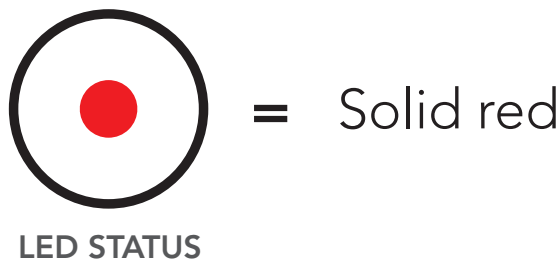

*"Headset reset, good-bye"*

**Note:** If you press the **Phone Button** or don't press the **Jog Dial** within **5 seconds**, the reset attempt is canceled and the headset returns to standby mode. You will hear a voice prompt saying **"Canceled"**.



Copyright © 2021 Sena Technologies, Inc.  
All rights reserved.

© 1998–2021 Sena Technologies, Inc. All rights reserved.

Sena Technologies, Inc. reserves the right to make any changes and improvements to its product without providing prior notice.

Sena™ is a trademark of Sena Technologies, Inc. or its subsidiaries in the USA and other countries. SF1™, SF2™, SF4™, SFR™, SRL™, Momentum™, Momentum INC™, Momentum Lite™, Momentum Pro™, Momentum INC Pro™, Momentum EVO™, Cavalry™, Latitude SR™, Latitude SX™, Latitude S1™, 30K™, 33i™, 50S™, 50R™, 50C™, 5S™, 20S EVO™, 20S™, 10S™, 10C™, 10C PRO™, ProRide EVO™, 10C EVO™, 10U™, 10Upad™, 10R™, 3S™, 3S PLUS™, SMH5™, SMH5-FM™, SMH5 MultiCom™, SMH10™, SMH10R™, SPH10™, SPH10H-FM™, Savage™, Prism Tube WiFi™, Prism™, Bluetooth Audio Pack for GoPro®, Impulse™, R1™, R1 EVO™, R1 EVO CS™, R2™, R2 EVO™, R2X™, M1™, M1 EVO™, RUMBA™, RC1™, RC3™, RC4™, Handlebar Remote™, Wristband Remote™, PowerPro Mount™, Powerbank™, FreeWire™, WiFi Docking Station™, WiFi Sync Cable™, WiFi Adapter™, +mesh™, +Mesh Universal™, MeshPort Blue™, MeshPort Red™, MeshPort Black™, Econo™, OUTRUSH™, OUTRUSH R™, OUTSTAR™, OUTSTAR S™, EcoCom™, Parani A10™, Parani A20™, Parani M10™, pi™, Snowtalk™, Snowtalk2™, SR10™, SR10i™, SM10™, SPIDER RT1™, SPIDER ST1™, X1™, X1 Pro™, X1S™, Expand™, Expand Boom™, Bluetooth Mic & Intercom™, Tufftalk™, Tufftalk Lite™, Tufftalk M™ are trademarks of Sena Technologies, Inc. or its subsidiaries. These trademarks may not be used without the express permission of Sena.

GoPro® is a registered trademark of Woodman Labs of San Mateo, California. Sena Technologies, Inc. ("Sena") is not affiliated with Woodman Labs, Inc. The Sena Bluetooth Pack for GoPro® is an aftermarket accessory specially designed and manufactured by Sena Technologies, Inc. for the GoPro® Hero3 and Hero4 allowing for Bluetooth capabilities.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sena is under license. iPhone® and iPod® touch are registered trademarks of Apple Inc.

Address: 152 Technology Drive Irvine, CA 92618